



StudioKat Designs, Inc.

Phone: 336/416-1799

Email: info@studiokatdesigns.com

the AeroSling

Step 33: Trimming away the top seam of Bag



Important Step 32 Note!

If you have used zippers with locking zipper pulls, then you MUST unzip the longer of your two Bag Front zippers to avoid being permanently "locked out" of your bag!

33a) **Stitch 3/4"** across top single-notched edges of Bag, then restitch around entire circumference again for security,

33b) then clip BOTH top corners diagonally to remove some bulkiness from this area (but do not clip any closer than 1/4" from each corner.)

