



 
StudioKat Designs, Inc.

Phone: 336/416-1799

Email: info@studiokatdesigns.com


the AeroSling

Steps D1-D2: Stitching Bag Bottom Darts in place

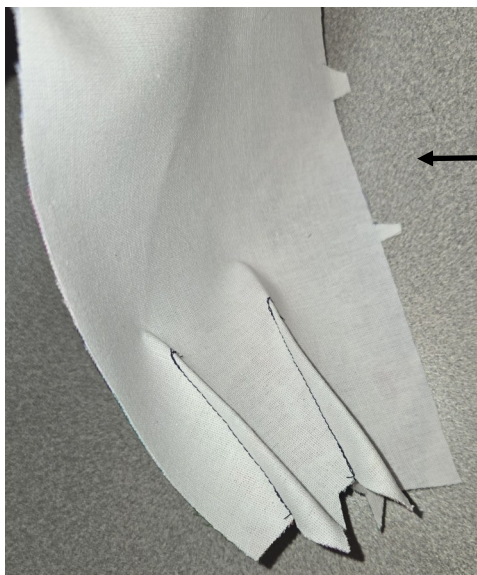

D1– Stitch darts RST, in the bottom edges if each item in the indicated locations on each pattern template

 Make sure you reinforce the stitching at the top of each dart.

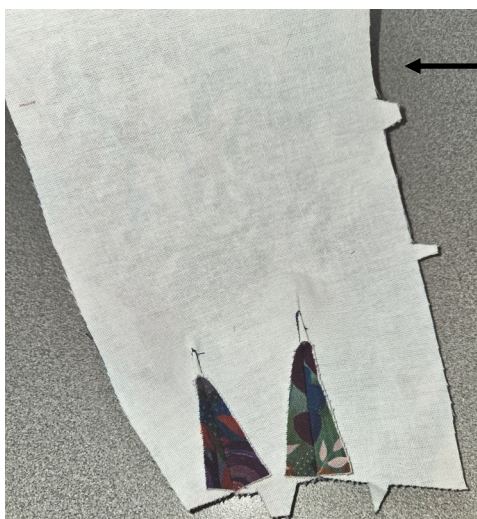

D2– Carefully cut each dart open & upward to within ~1/2" of the dart top. Press each dart open & flat. Then clip off any "dart tails" even with fabric edge.

This will give your bag bottom edge a pleasantly curved appearance.

