

# PortaPocketsPLUS

## Additional pictorial help

### For step 33-36

### CC Caddy Bias Tape



Whether you're finishing off your Large or Small Caddy, start this procedure by applying bias tape to your 3 curved side edges (leaving your 1 straight edge open). Make sure you unhook your elastic first. Stitch 1/4" from edges.



Flip your bias tape over your raw edges now, and stitch it in place on the other side.




Now we can re-hook our elastic along the bottom edge, and trim our bias tape off to the fabric edge.





## For step 33-36 CC Caddy Bias Tape (cont.)

Now we can apply our bias tape to the straight edge.

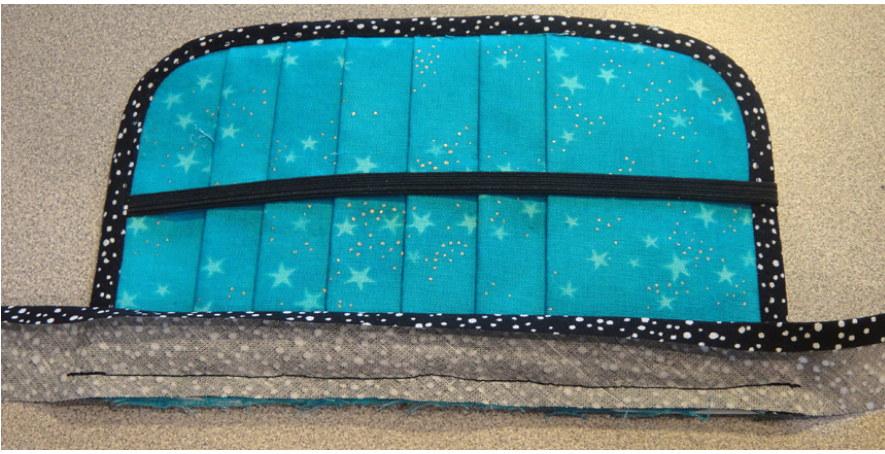

Make sure you wrap the bias tape end around the corner before you finish before you stitch it in place.

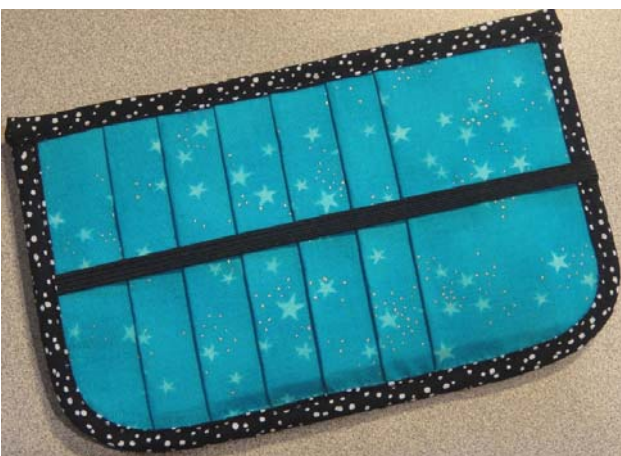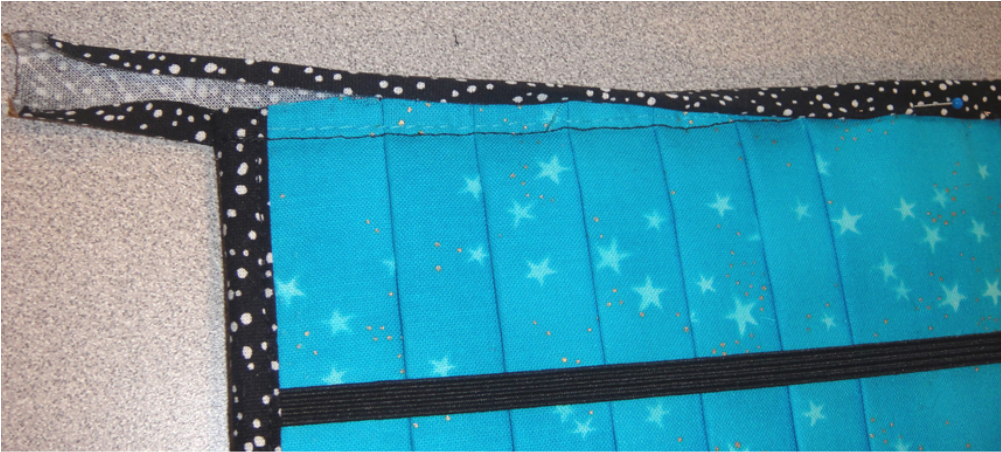

Load your card in the Caddy & push them as far as possible to the curved edge. Stitch  $\sim 1/8$ " from card edges for a nice, tight fit.