

the ErgoMatic

Steps 53a-55—Attaching Side Walls to Bag Back



Step 53a

Here's two different shots of aligning the top **SEAM*** of Zip Panel with single notch at top curve of Bag Back.


***Please note**— you want to align the top SEAM... not necessarily the edge of the bias tape.



Step 53a

Here's two different shots of aligning the bottom **SEAM*** of Zip Panel with bottom single notch of Bag Back.

***Please note**— you want to align the top SEAM... not necessarily the edge of the bias tape.

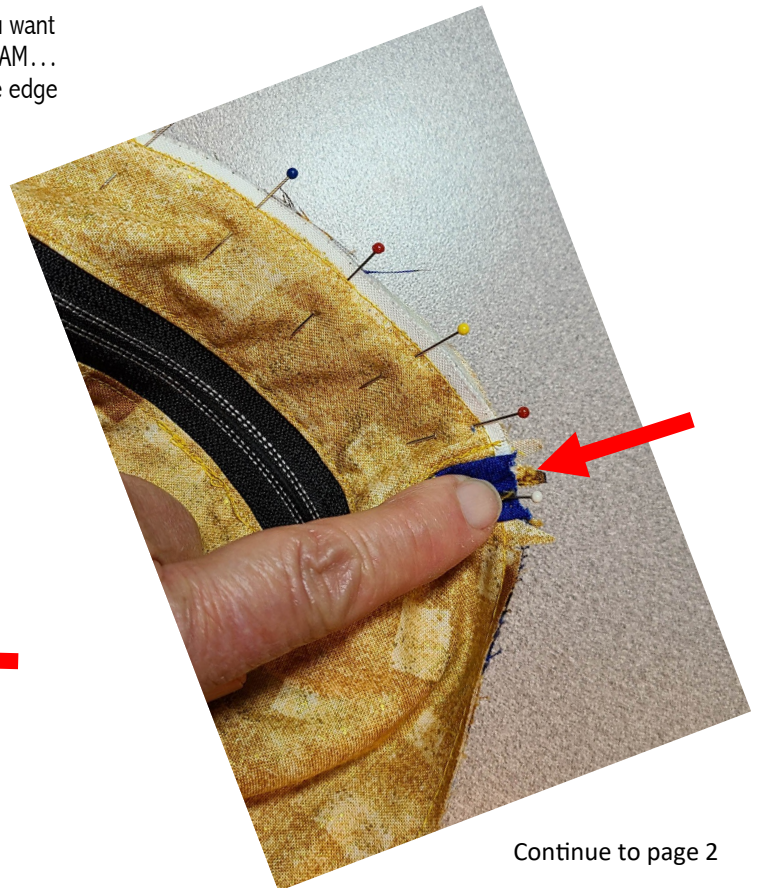

the ErgoMatic

Steps 53a-55—Attaching Side Walls to Bag Back (cont.)



It may not seem so, but it really is a LOT easier to stitch the SideWall to the Bag Back by doing so with the “Tech-Pocket-side” face down on the machine bed... as seen at left.

And here’s an important tip.

I generally use a dark thread (for top and bottom) to do this stitching.

#1– even with the dark thread, it just wont show on the inside because it will be buried deep within the interior seam, and...

#2– I’ve found that if I use a light colored thread to math the interior, that sometimes I see little snippets of the stitching on the outside dark exterior, even though I stitched the seam accurately!



And here’s two shots of the bias taping. :)

