


the ErgoMatic

Steps D2-E3— Cutting out the Pocket & Flap in Interfacing

Once you've completed steps C1-4, you'll find that the cutting out of the Pocket & Flap in Interfacing is very similar, BUT— I thought it might be helpful to see these visuals below.

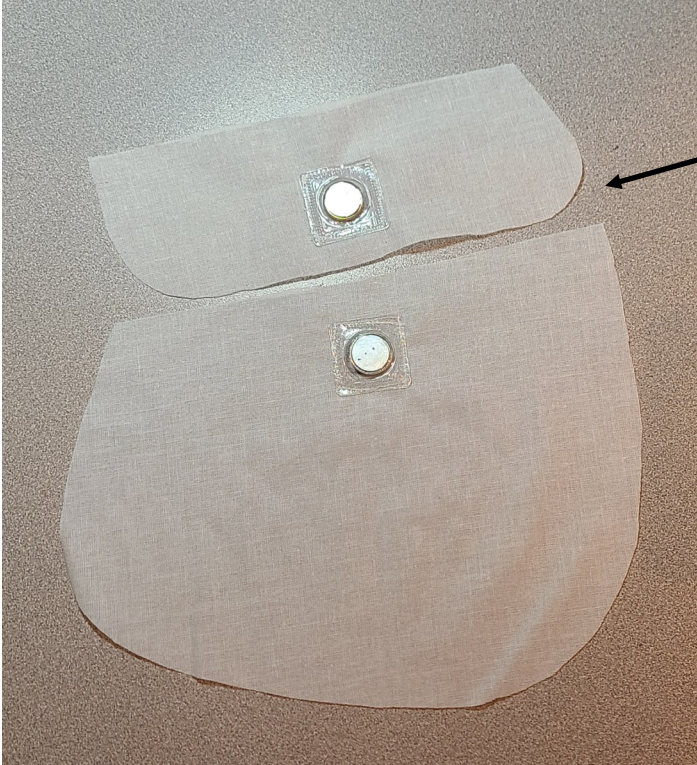

This is how your Pocket (#3) and Flap(#4) should look after they are cut out and the magnetic snaps are attached.

In this photo they are fusible side UP

In this photo, you can see that the interfacing (and mag snaps) are fused in place.



In this photo, (illustrating step E3),

The Flap is placed RST with the Pocket to confirm that the mag snaps match.

