

the Katalina

Steps 28-31– Placing Welts/Wallet & completing the Bag Front



Step 28– Retrieve Wallet unit from step 19 and place it Caddy side DOWN on Bag Front.

Push Wallet unit to the right (see yellow arrow) exposing the raw edge of Welt underneath it. Align raw edge of Welt with side edge of Bag Front matching double notches. Stitch Welt in place close to edges (see pink dashed line)



Step 29a– After pressing top edge of Bag Facing over 1/4" (WST), align long straight edge of w/side edge of Welt, again matching those double notches and with Wallet unit still pushed to the right. Now stitch a full 1/4" from edges.



Step 29b– Press Bag Facing away from Welt & Wallet unit aligning edges with Bag in foam.



StudioKat Designs, Inc.

Phone: 866/409-8634

Email: info@studiokatdesigns.com


the Katalina

Steps 28-31– Placing Welts/Wallet & completing the Bag Front (cont.)



Step 30– Top stitch close to all Bag Facing edges then...

Repeat steps 28-30 to attach remaining Welt & Bag Facing to opposite side of Bag.

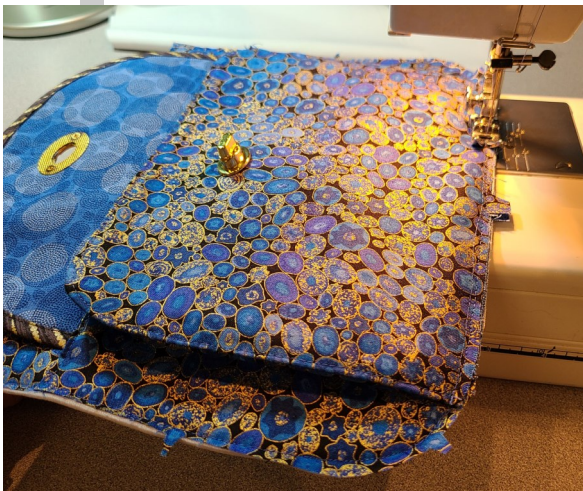

Step 31– Now recenter Wallet unit over Bag Front aligning bottom edges & double notch with Slip Pocket underneath. Stitch in place a scant 1/4" from bottom edges **ONLY**.



This is your completed Bag Front. Set it aside for step 38. →

