


Stitch Darts in the bottom edges of Bag Back(#1) & Pouch(#3).

StudioKat Designs, Inc.

Phone: 866/409-8634

Email: info@studiokatdesigns.com

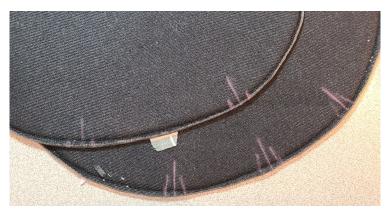

1) Retrieve Pouch(#3) & Bag Back(#1) in exterior & lining. Flip them both FSD (fabric side DOWN). Transfer both dart placements AND centerline placement from pattern piece directly onto foam and WS of lining.





2) Stitch along the centerline of each dart starting at fabric/foam edge and & stopping at the peak of each dart. Reinforce stitching at peak.



3) Fold foam/lining RST along the stitched center line, matching the outside dart lines. Make sure that exterior fabric (within dart area) is pushed firmly & completely inside this fold.



Now side stitch proce Bag I for be



the Tandem DayPack Steps 1-3 (page 2)

Stitch Darts in the bottom edges of Bag Back(#1) & Pouch(#3).

StudioKat Designs, Inc.


Phone: 866/409-8634

Email: info@studiokatdesigns.com



Now stitch along dart line from outside edge to peak of dart. Reinforce stitching at each end. Follow this procedure to create two dart lines in Bag Back & three dart lines in Pouch $\underline{\text{for both exterior }\& \text{lining}}.$

Set them ALL aside for now.

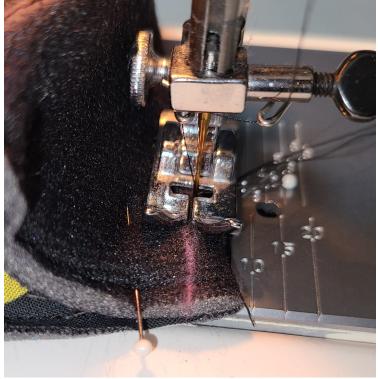





\And this is how they should look when theyre done

:)