


the Carolinian

Step 9- Placing Bands on Bag Front

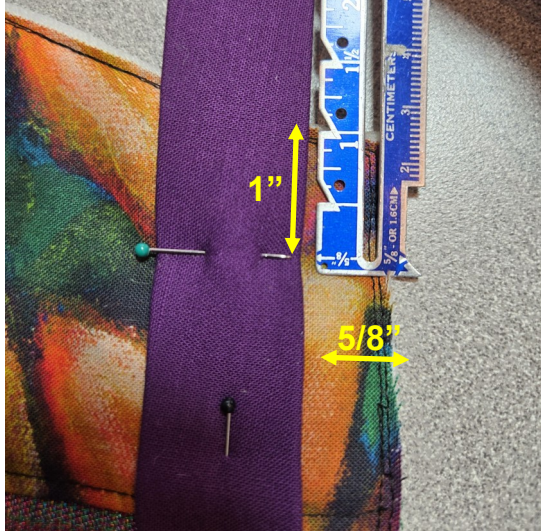

Here's a collection of Step 9 pictures you might find helpful.

9) Place a Band WSD along each side edge of Bag Front in exterior (*from step 7*), aligning each Band parallel to, **AND** $5/8$ " away from Bag Front side edges, while **also** aligning bottom single notches with those on bottom edge of Bag Front. Stitch in place close to **BOTH** side edges of Band, beginning ~ 1 " below each Bag top corner edge, & continuing to Bag bottom edge

