


## Wrapsody stepA2- Placing magnets on Bag in Foam (from #A1)




1) First, separate your magnet pairs and place them "magnetic-side UP" on the table. Label both pieces of one set with an "A" and the other set with a "B".




2) The easiest and most accurate way to place your magnets in the correct spot on your Soft & Stable is to first cut out **all four** of the circled indicator spots on your pattern template.

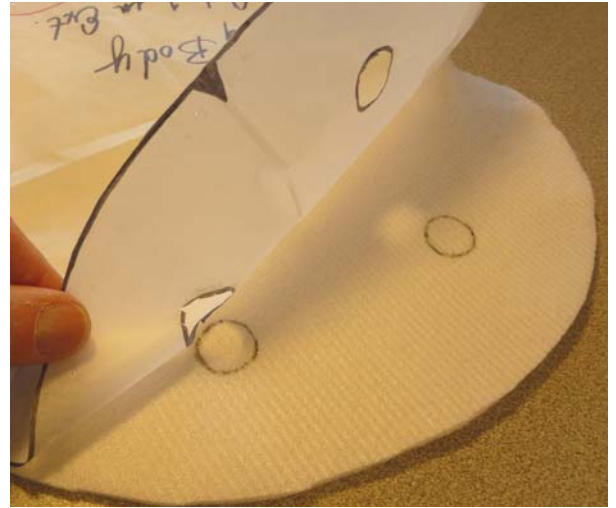

3) You can now easily transfer this spot to the OverFlap area of your Soft & Stable by outlining the circle with a marker. Now remove your pattern template, flip the Soft & Stable over, replace your pattern template over to the UnderFlap area. Use your marker again to outline each circle directly on the Soft & Stable. **PLEASE NOTE: the UnderFlap magnets will NOT be on the same side of your Soft & Stable as the OverFlap magnets!**

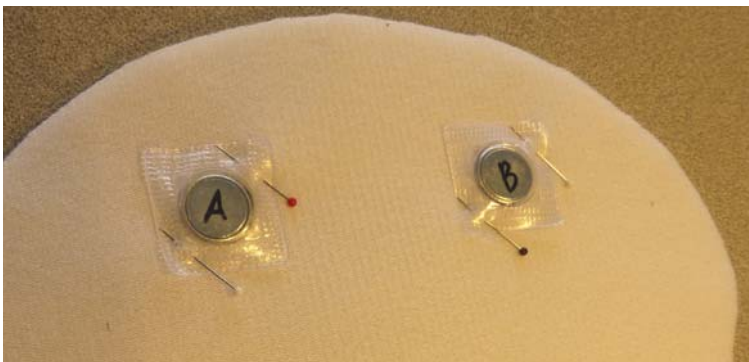

4) Place one "A" and one "B" magnet piece within the circled areas indicated on the Bag OverFlap with their magnetized, marked side facing UP. Pin to secure them in place then stitch around all 4 plastic edges. Reinforce this stitching.

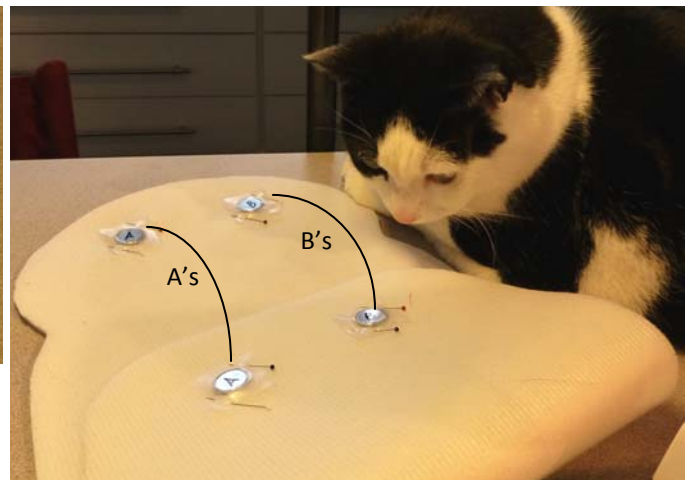

5) Flip UnderFlap area of Foam UP toward OverFlap area. Place one "A" & one "B" magnet piece within the circled areas indicated with their magnetized and marked side facing UP. Please note that in this arrangement, the "A" pairs should be matched on the left side of the Foam (and the "B"s on the right). Double check to make sure this is the case, (or ask your assistant to check for you), then stitch them in place and set your Foam aside for step 33.