

Bangle Buddie- Finishing Panels - Steps 13-15



13) Now align the remaining Base short edge in exterior ONLY, RST w/ opposite Panel edges, (leaving Base in lining free & unattached for now). Stitch 1/4" from edges.




Press Base in exterior & Panel unit seams AWAY from zipper.

14) Press over a scant 1/4" WST on remaining short edge of Wide Base lining.



The pressed Base lining end should now cover or some close to concealing the raw Panel unit edges.

You can "roll out" that pressed edge if you need to cover the seam from step 13.

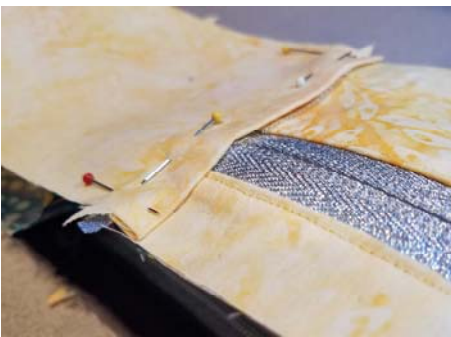

Carefully top stitch in place.
Reinforce stitching.



15) Reach in between the Base exterior & lining to gain access to the zipper ends. Trim zipper ends even with fabric edges on BOTH side of zipper.