

Bangle Buddie- Attaching Wide Panel unit to Bag Front - Steps 35-36



35) Retrieve Bag Front from step 21. Place it "center-unit-side DOWN on flat surface. Push/pull the **WIDE PANEL** side of unit over **AND** on top of Bag Front so that it is aligned CST with the Thin PANEL of the Bag Front unit. Match triple notches along Bases, then all other notches & edges.

Please notice!!! The Thin Panel side of your unit should be facing UP and be clearly visible above the Bag Front

STOP!

Take time NOW to double-check your work!

Your Wide Panels MUST be aligned w/ the Thin Panels of your Bag Front, or your finished Bag will NOT function correctly. It will be unbalanced and tippy!

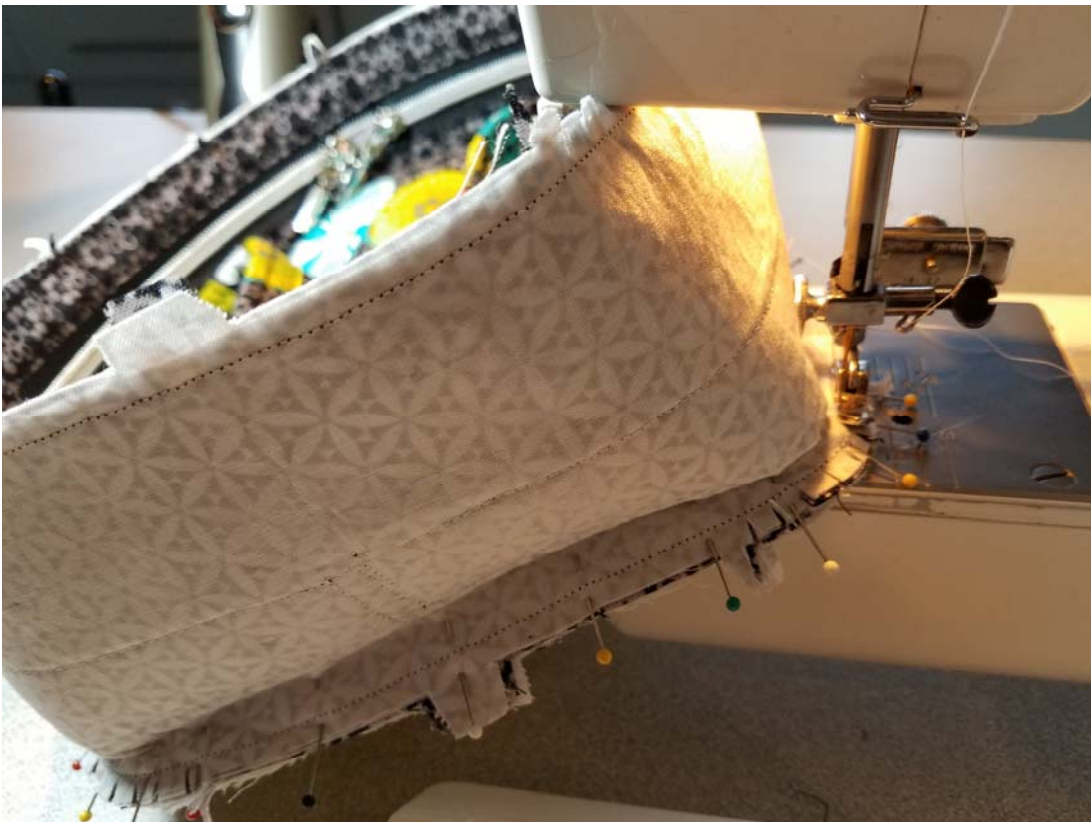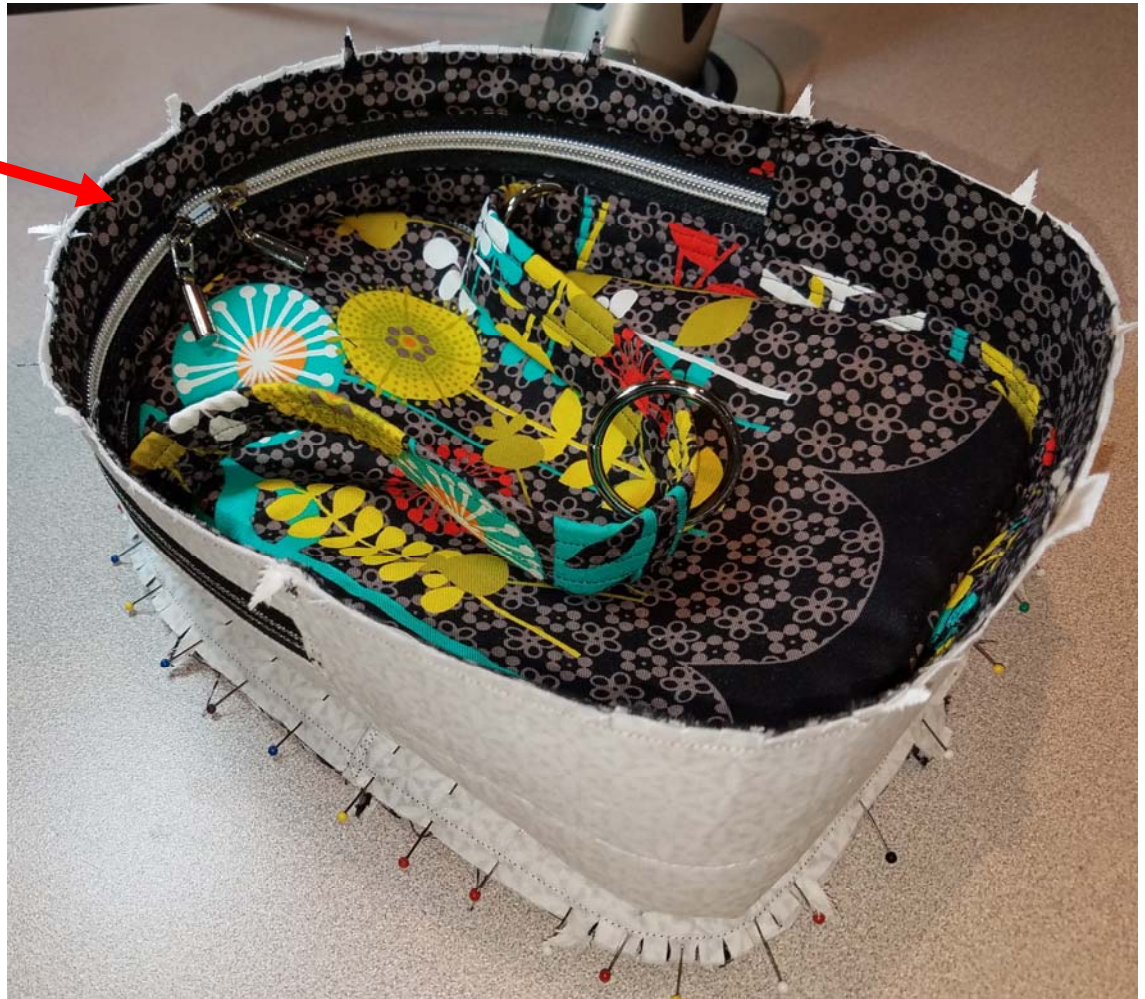

36) Using a zipper foot in this step (and thru step 38), stitch a FULL 1/4" from edges with Center unit face DOWN on machine bed. Restitch for security.