

# The Cosmo Convertible

## Preliminary Step A1

### “Assembling Large Pattern Pieces”


There are FOUR pattern pieces that were actually too large to be laid out on our 11” X 17” pattern sheet. They are as follows and will need to be assembled PRIOR to use.

- #5a + #5b– Side Back
- #8a + #8b– Bag Front
- #9a + #9b– Bag Lining
- #14a + #14a + #14b– Wrapper

You find an “X’d” line on each on of these pattern pieces.

You’re going to need to attach these pieces EXACTLY along this “X’d” line, and the easiest way to do this is to make a copy on tracing paper and then superimpose one piece over the other along this line.

In the case of #14, your Wrapper pattern piece, you’ll need to attach a #14a on BOTH sides of your #14b piece. :)

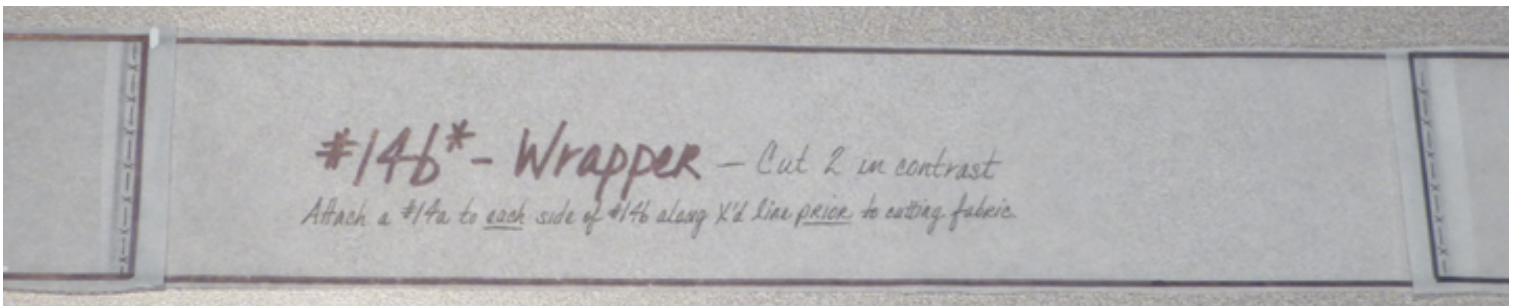

Here's how #9a + #9b look when they are put together.

