

The Cosmo Convertible

Steps 3-4

“Attaching Inner Pocket”



OK— Here's how we find our Zip Pocket after step 2, with the Facing(#2) & the Lower Back(#1) WST and topstitched in place.




3) So we're going to reach under and pull the lower edge of the Inner Pocket UP above the top edge of your zipper. It should be RS UP like you see it here.




3 cont.) Now you simply place your Inner Pocket (#3) RST with the Zip Pocket facing and stitch 1/4" from the edges.

Steps 3-4 (cont.)

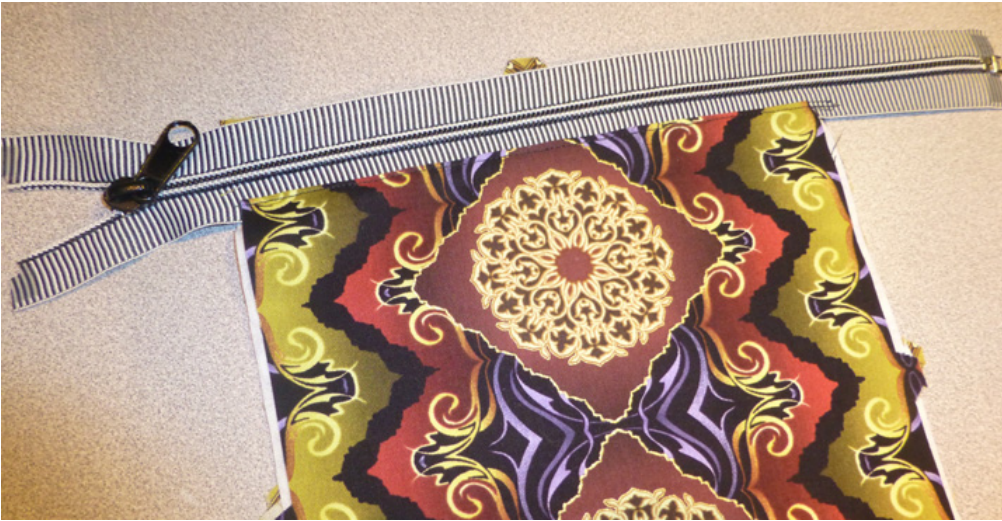

4) Now replace Zip Pocket Facing/Inner Pocket to its correct position behind Lower Back.

If the zipper you've used measures 1.5" wide, then you should be able to see the double notch peeking out just above the top zipper edge.

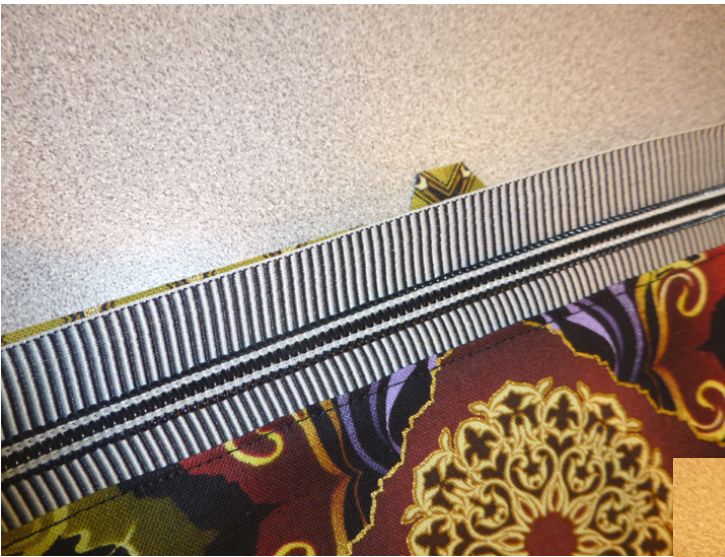

4) Here's a closeup view

And in it you can also notice that the top raw edge of the Inner Pocket pretty much aligns with the top zipper edge.

But, if you've used a zipper that only measures 1" across, then the top edge of the Inner Pocket will actually be ~1/4" TALLER than the top zipper edge. (like in the picture below)

This is NOT a problem. You can either trim it off even with the top edge of your zipper, or you can ignore it. It won't hurt a thing. :)



4 cont.) Now you can just topstitch along the top edge of your zipper to secure the Inner Pocket placement underneath and to keep it from shifting around in the upcoming steps. :)