


Go-Go Compact- Bag Floor - Step 21

21) Pull zipperpull out as far as possible to side edge of Base then center Floor WSD over zipperends. Push any visible side edges of Zipper under side edges of Floor then pin in place to secure. Stitch in place close to BOTH long Floor edges & the short edge opposite from zipper pull.

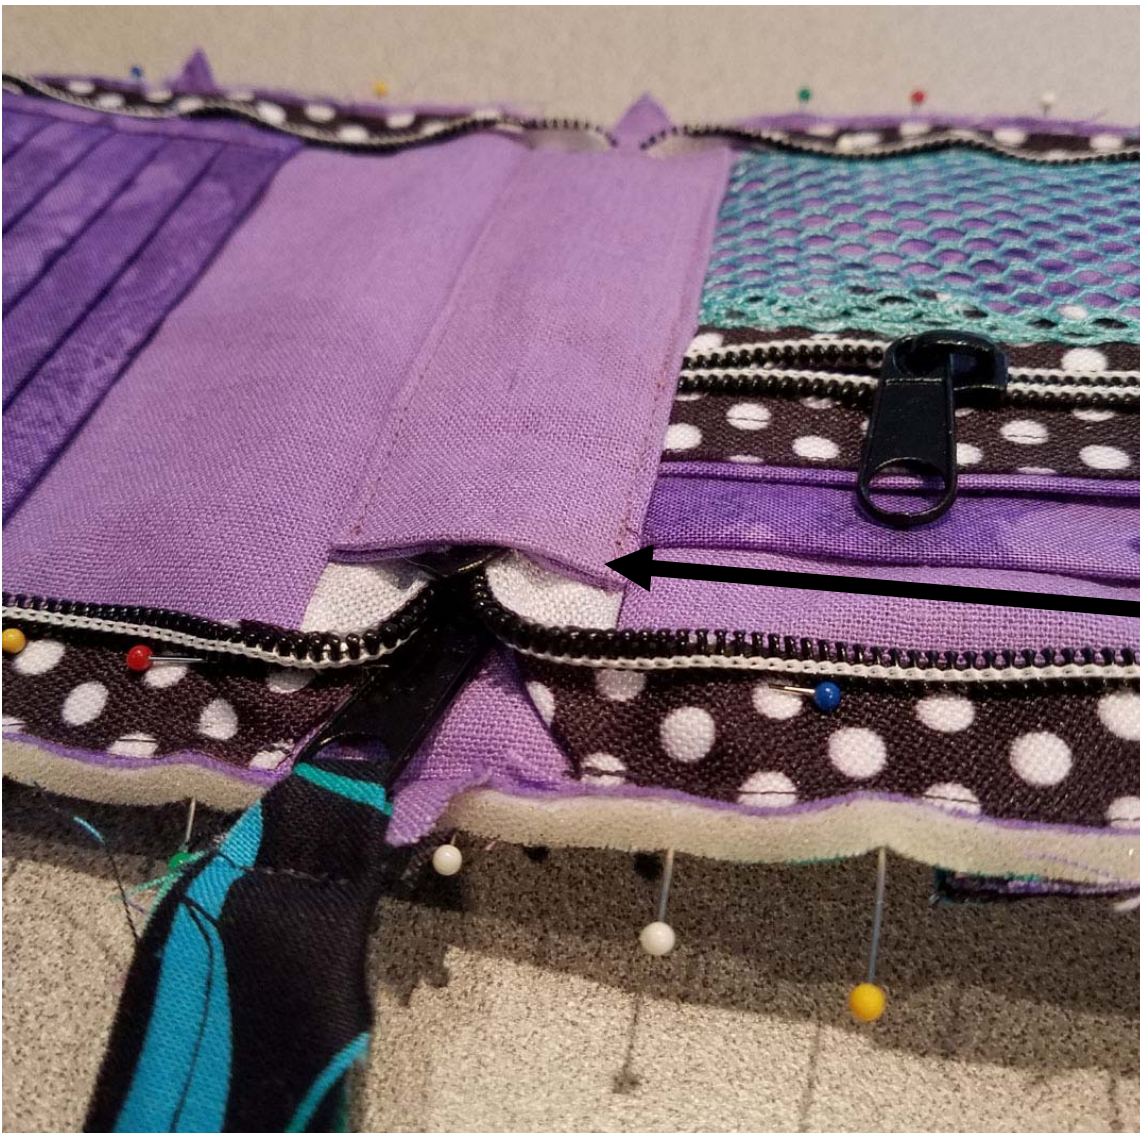

*Leave the short edge
closest to zipper pull
open & un-stitched
until step 48.*