


PortaPocketsPLUS

Additional pictorial help For steps 64z-65z Insert Connectors With ZIPPERS



Press both zipper ends back just above the top zipper stop. (Notice that they are pressed back on a slight angle, this will be important later.)

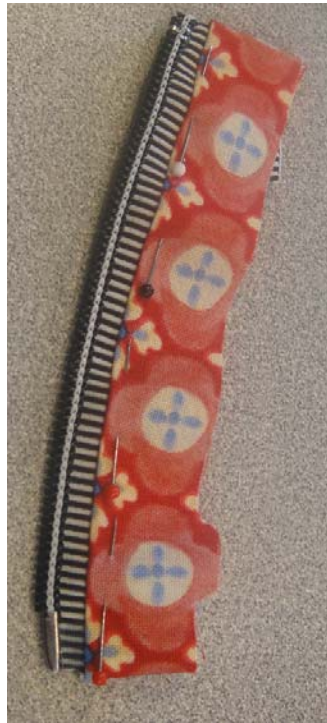

Our pressed zipper should now slide perfectly inside the pressed edges of our Zip Wrap.



Here's how our ZipWrap on the flip side (wrong side of zipper). See how you can see a bit of the pressed zipper top edge peeking out? Once it's stitch in place, I like to snip off some of this extra zipper tape to keep it out of the Insert seamage, but snip carefully!



And here's a completed Insert Connector. We'll need a total of four to complete our cover look.