



## PortaPocketsPLUS—Additional pictorial help For steps 68-69—Attaching 3rd & 4th Connector

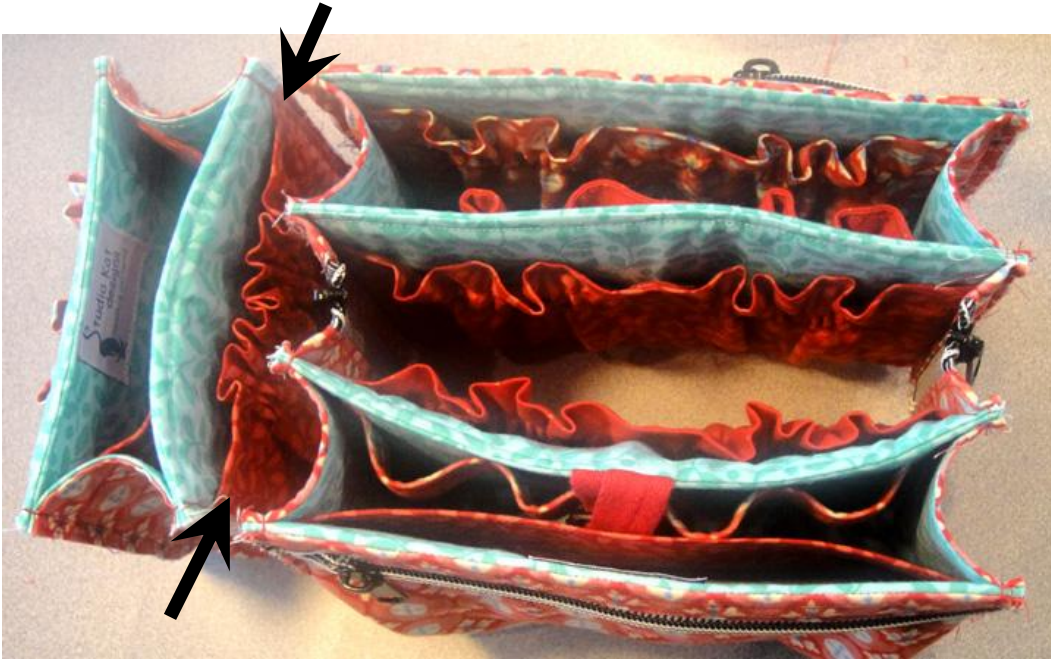

So now, as we place and attach our 3rd and 4th Insert Connectors, it should be a piece of cake, right? Well not so fast! The placement of these Insert Connectors is a little different. Please examine the following pictures carefully.

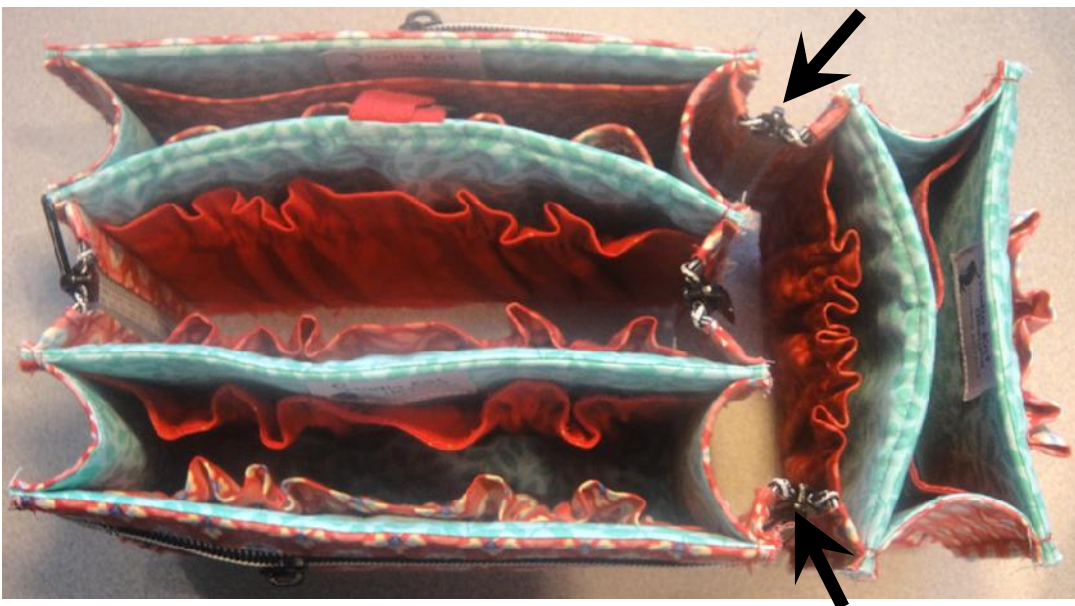

And here's how our project looks with all 4 Insert Connectors attached. This picture gives you a bird's eye view of exactly where they are stitched in place. Notice they again "bow-in" toward the center of the unit when they are stitched in place and connected, but for more specific placement pictures, flip to page 2.

## PortaPocketsPLUS (page 2)—Additional pictorial help For steps 68-69—Attaching 3rd & 4th Connector



In this picture it's a little easier to see where the Insert Connectors are placed. One piece of your 3rd Connector is aligned along the Insert edge of the THIN module and the other is aligned along the back **EXPANDER** edge of your back Module (in this example, both of the connected modules are Basic modules, but for our Cover model, you would be placing it along the Expander edge of the TALL Insert).



In this picture, we've gone ahead and zipped up our 3rd Connector attaching one edge of the Thin Insert with the back unit. Now lets attach our 4th Connector. One piece of your 4th Connector is aligned along the remaining Insert edge of the THIN module and the other is aligned along the front **EXPANDER** edge of your front Module (which is a Basic insert in this example and also in our Cover model).