


# Installing Zipper Closure- Steps 42-43 (page 1)



42) Mark the midpoint of your purse zipper along both side edges then open zipper completely. Place one zipper edge **WSD AND 1/8" BELOW** lining raw edge, matching the center mark of zipper w/ the single notch above CC Slots. Continue pinning zipper in place **1/8" away from** lining edge around CC Slots perimeter until you're ~1/2" away from centerline notch on each side of Wallet.

When pinning is complete, push zipper ends **INWARD & RSD** so they're **end-to-end** along centerline of Wallet.

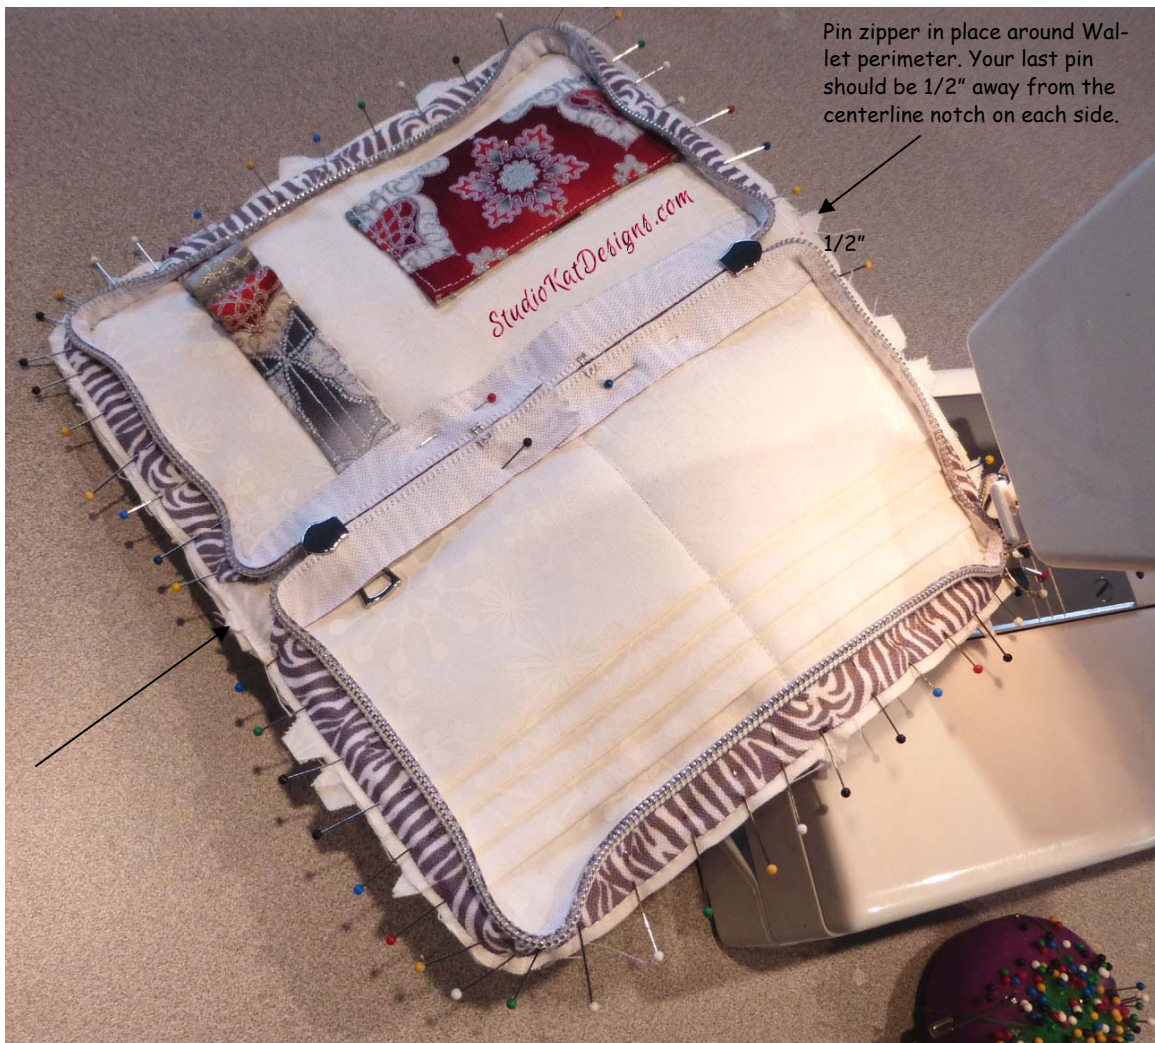

Pin zipper in place around Wallet perimeter. Your last pin should be 1/2" away from the centerline notch on each side.

43) In similar fashion, align remaining zipper edge **WSD and ~1/8" away** from edges (on Pen Holder side of Lining) matching step 42 mark w/triple notch.

## Installing Zipper Closure- Steps 42-43 (page 2)



Now stitch a scant 1/4" from edges around entire perimeter of Wallet. Trim away all remaining notches, but **DO NOT** trim zipper ends yet.

See how the zipper "stands-up" once I remove the pins?

