


Uptown Saddlebag

UnderFlap– step22

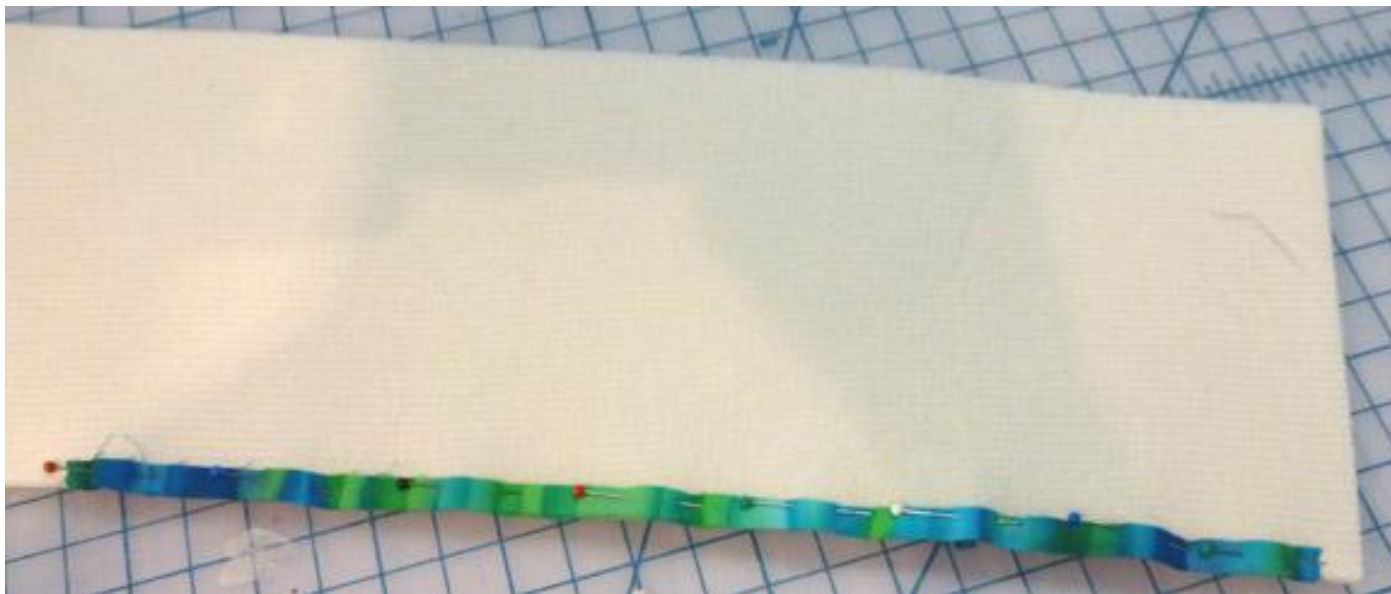

Place UnderFlap WSD on 4" X 11" piece of S & S, concealing bottom edge of S & S within the pressed bottom edge of your UnderFlap. (above) Just slide that S & S right into that fold so it will be concealed. :)

Then pin in place in place & stitch close to ALL 4 edges of your UnderFlap. (below)
Carefully cut S & S even with UnderFlap edges. DO NOT cut off notches.

