



# Uptown Saddlebag

## Snap Pouch Lining— steps 16-19

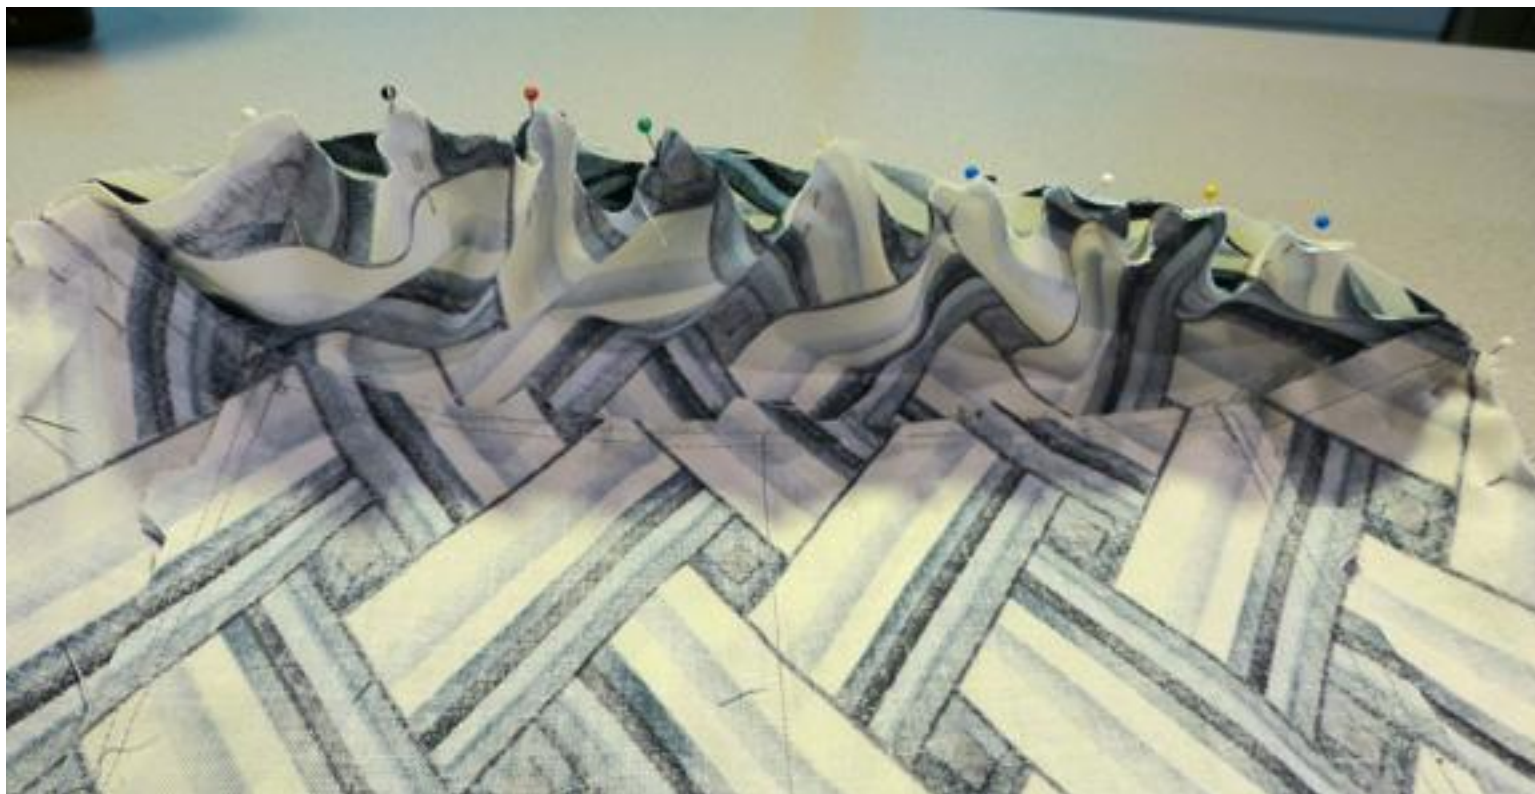

16) Place Base/Vent in lining RST along bottom edge of Snap Pouch lining (from step 14). Match ALL notches in place. *Single notch on Pocket Side edge (below triple notch) aligns w/ Base/Vent seam.* You'll have loose fabric between every notch.

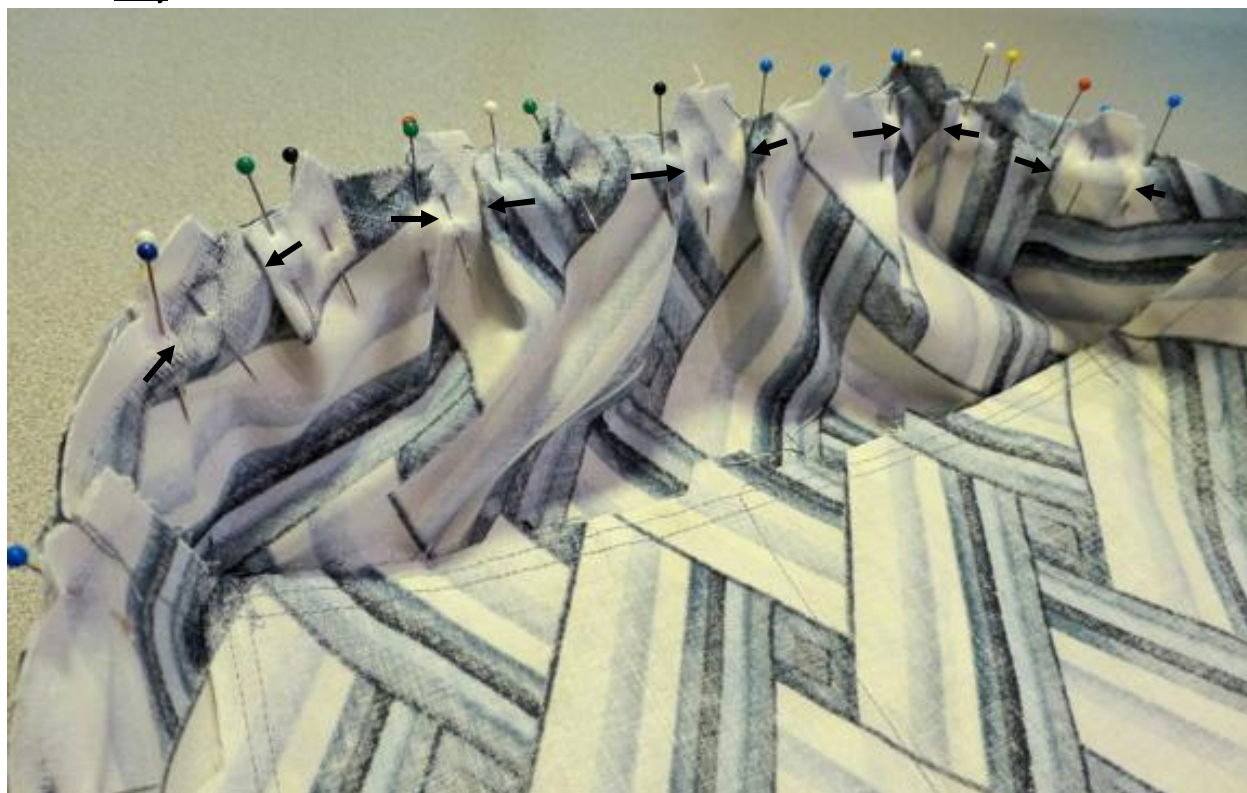

17) Pinch loose fabric between notches even w/Base edges, bending it towards nearest double notch. Stitch 1/4" from raw edges. Carefully clip curves.

## Snap Pouch Lining (continued)– steps 16-19



19) This is how your completed Snap Pouch looks after step 19 is completed.