


# Uptown Saddlebag

## Underflap Lining— steps 23-24

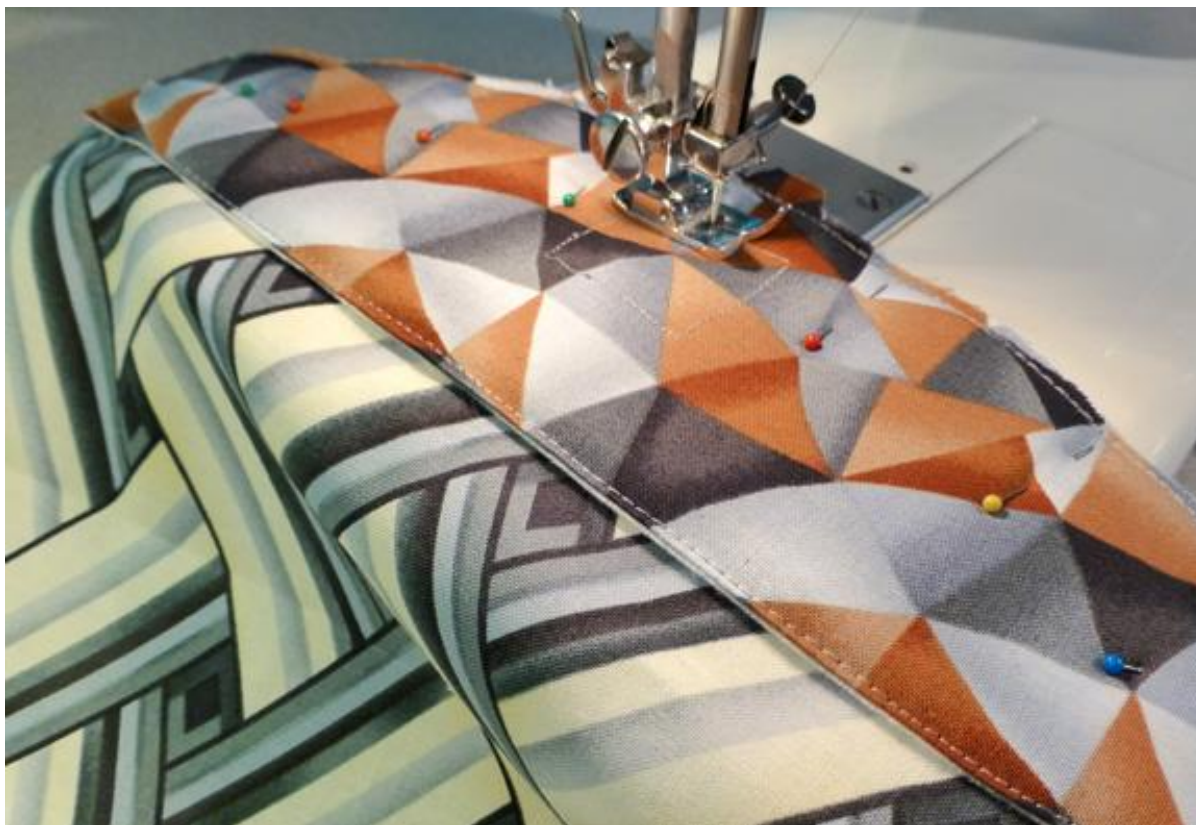

23a) Place UnderFlap S&S side DOWN on RS of Flap Lining. Pin in place & stitch close to ALL 4 edges. (above)



23b)  
Re-stitch around  
sewn-in snap, on  
top of stitching  
from step 21.

## Underflap Lining (continued)– steps 23-24



24) Retrieve Snap Pouch (from step 19). Align Flap Lining RST with Snap Pouch lining matching all notches. Just like in step 16, there's going to be loose fabric between the notches.



24b)  
Pinch the loose fabric so that its even with edges of the Base, then bend each pinch toward the nearest double notch (at left).  
Now stitch a scant 1/4" from edges. Set aside until step 36.