

Uptown Saddlebag


Tabs– steps 43-44

Place your hand inside the Zippered Flap pocket to smooth & flatten your UnderFlap lining area.

Now center & pin a Tab in place at the top of each Vent covering raw edge of vent tip. The top folded edge of each Tab should be ~1/4" ABOVE Snap Pouch rim.

Remove the table extender from your sewing machine bed so you can slide it INSIDE the zippered Flap Back. Stitch each Tab in place thru Snap Pouch AND UnderFlap lining in TWO places.

- ◆ 1/4" away from step 43 stitching under metal ring, AND

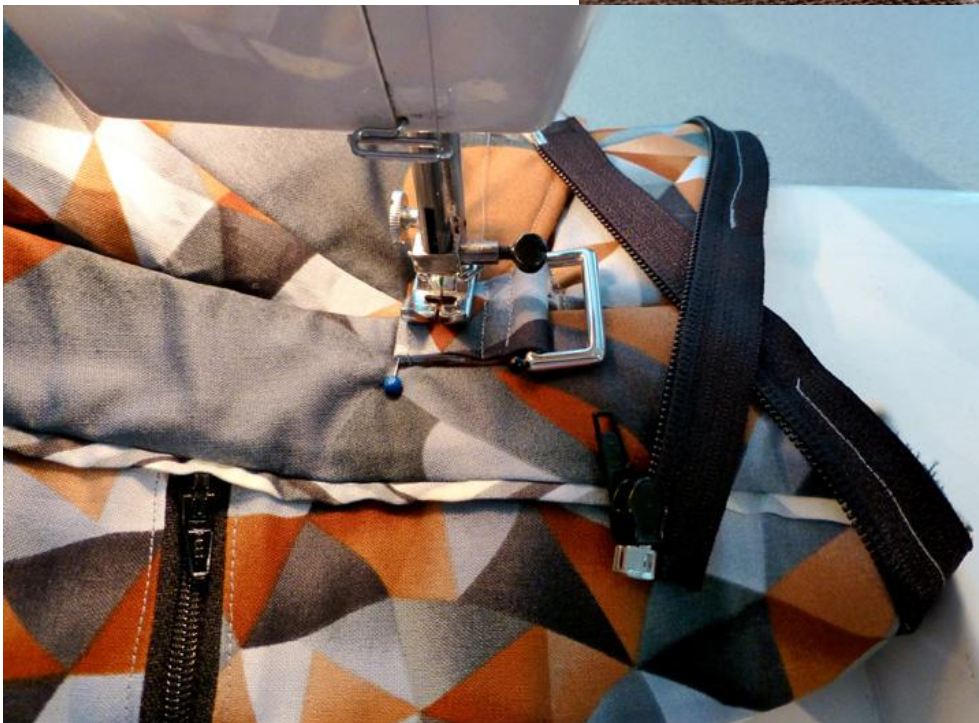

- 1/4" away from step 43 stitching at bottom of each Tab.

Reinforce stitching in both places.