


Cutting your Cotton Piping

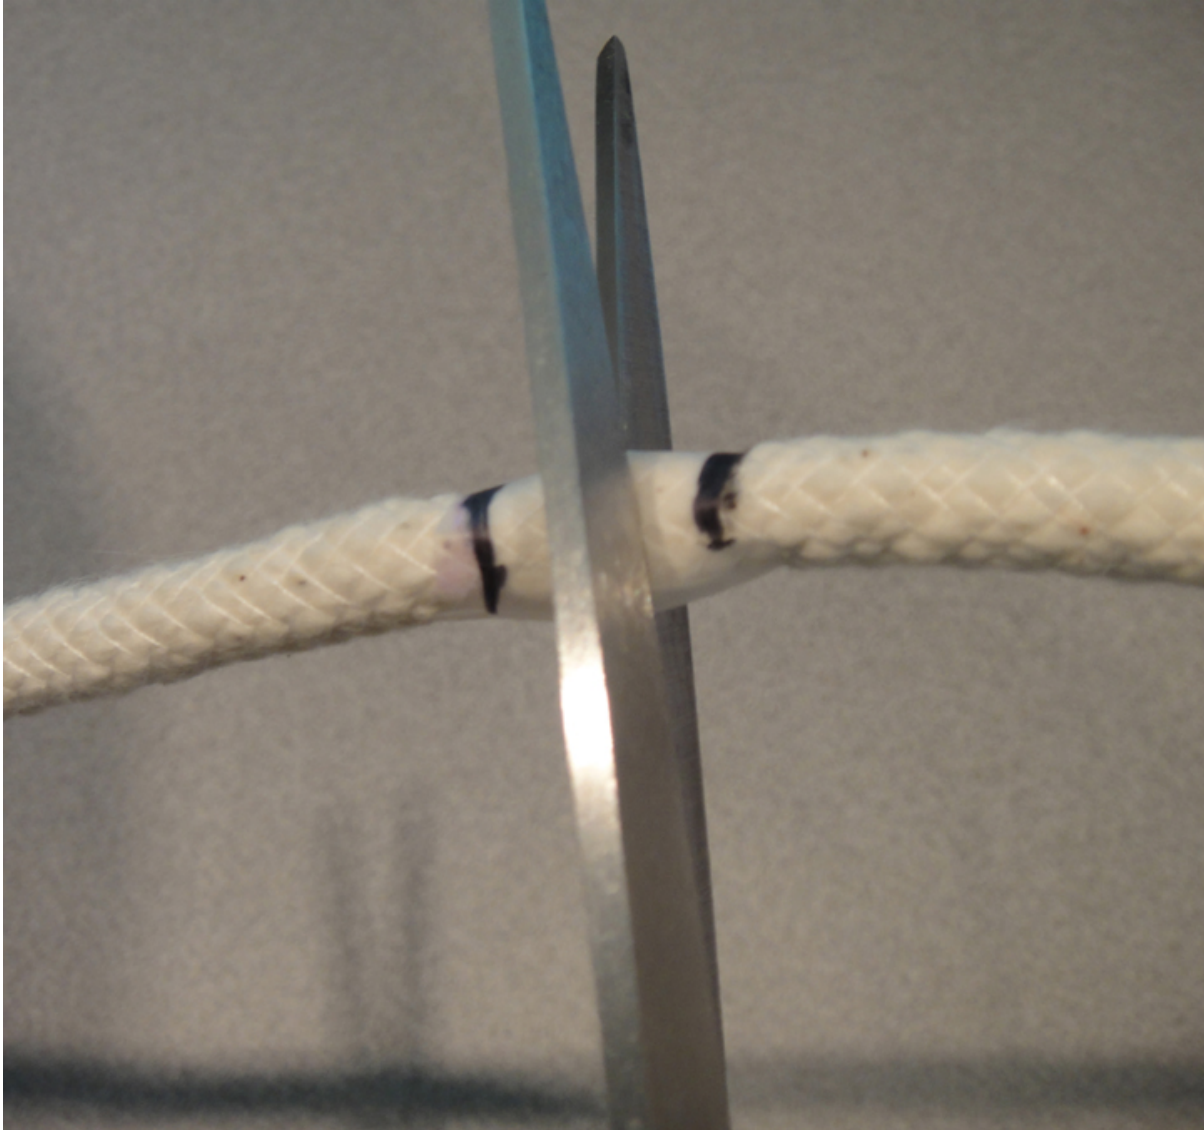

Unless otherwise directed, never cut thru a piece cotton piping without first taping the designated area. If it isn't taped, the cotton piping will immediately start unraveling and it also can get REALLY wide and bulky. Tape completely around the entire circumference of the cording, making sure the tape overlaps well before making your cut.