





The Side Slinger

Steps 19-22— Placing the Phone Pocket

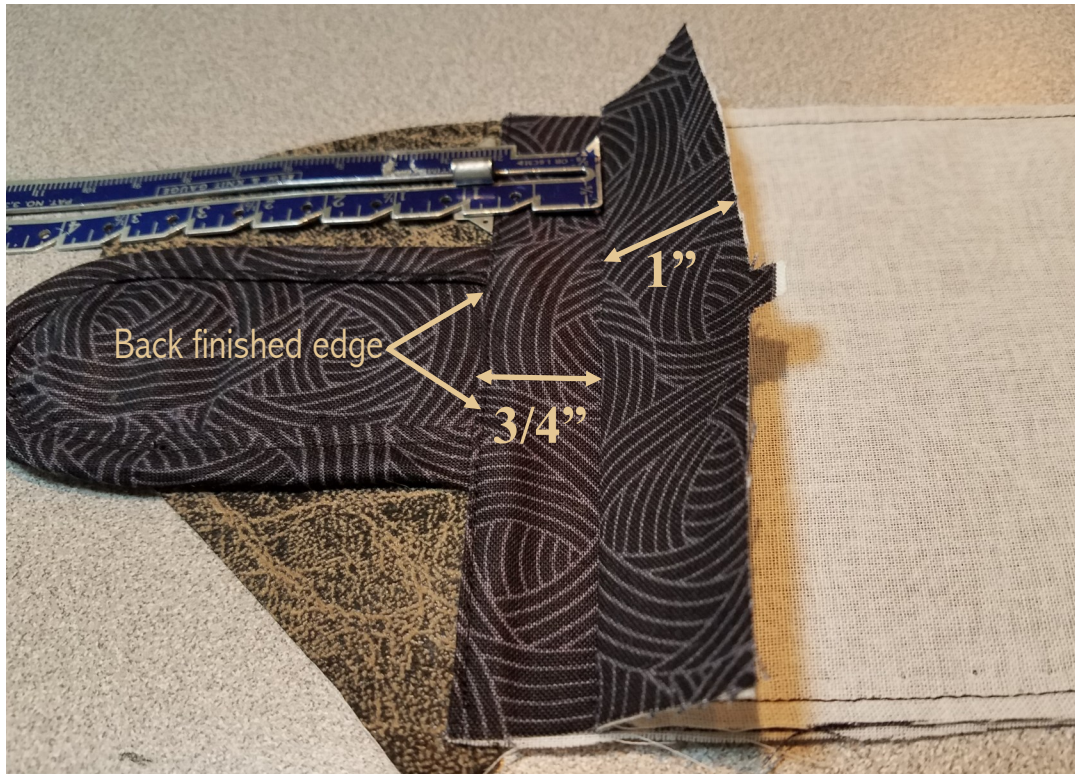

With Phone Slot folded RST, stitch close to both raw side edges of Phone Slot beginning at bottom corner & stopping ~3/4" from back finished edge.

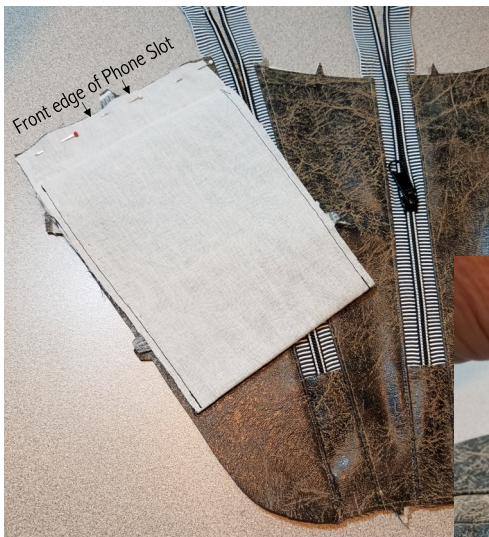

Place front edge of Phone Slot RST on top free edge of Pocket 3 aligning double notches & sandwiching Slot Top & Closure in between layers. Stitch 1/4" from these raw edges only.





The Side Slinger

Steps 19-22— Placing the Phone Pocket (cont.)



Topstitch close to top edge of Pocket 3.

Please note; Closure magnet should easily engage now with Pocket 3. If it doesn't, stop and find out why not.



Please note the positioning of the left edge of this zipper. It should be lying on the left corner edge of the Slot Top. (see closeup at right)



Here's a closeup of the underside of this area.



Now align the outside edges of Pocket 3 & the Phone Slot matching the double notches. Baste edges in place to secure them.