




the Katalina

StudioKat Designs, Inc.

Phone: 866/409-8634

Email: info@studiokatdesigns.com

Steps 1-5 – Placing Your Magnet Pair

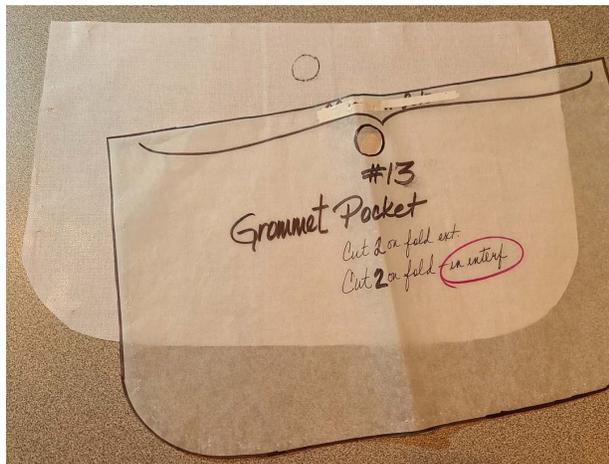


Step 1 : (at left shown only on Grommet Pocket(#2)) Carefully cut out the area WITHIN the mag snap circle printed on your Bag(#1) & Grommet Pocket(#2) templates.

Then transfer these placement circles respectively to the Bag(#1) in foam & to the interfacing side of the Grommet Pocket(#2) template.

Step 2a—Separate magnet pieces & place each one of the pieces MSU within the outlined area on Bag in foam & on Grommet Pocket in interfacing .

Secure placement with pins then stitch close to all 4 plastic edges of both magnets. Reinforce stitching.

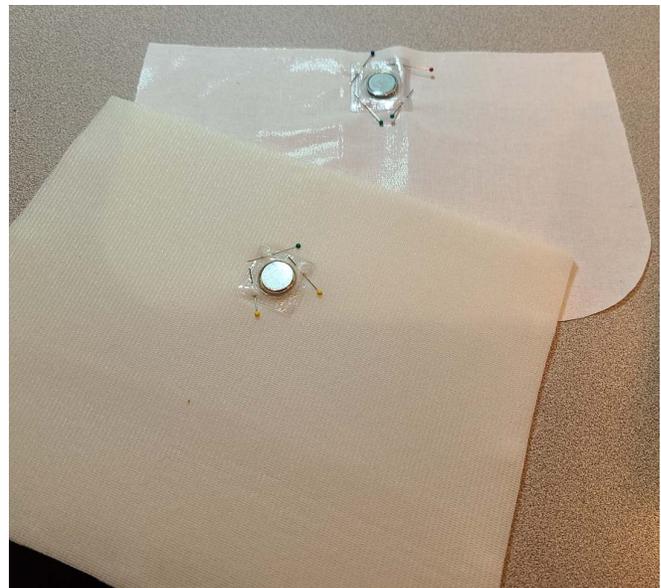

Step 2b- Now place Bag(#1) in exterior WSD on magnet-side of Bag in foam aligning & basting close all outside edges. edges. This is your Bag Back. Set it aside for step 7.






the Katalina

StudioKat Designs, Inc.

Phone: 866/409-8634
Email: info@studiokatdesigns.com

Steps 1-5 (cont.) - Placing Your Magnet Pair

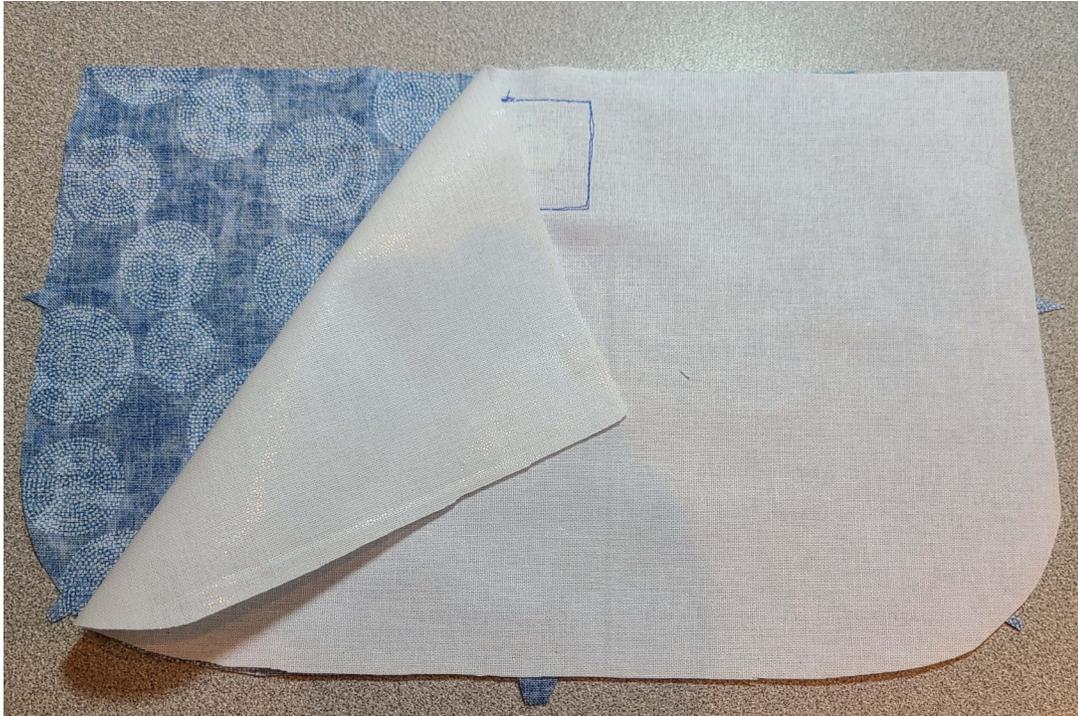

Step 3– Place Grommet Pocket in interfacing fusible-side **DOWN** on WS of Grommet Pocket in lining aligning all outside edges. Fuse in place then set Grommet Pocket in interfacing aside for step 4.



Step 4– Now place Grommet Pocket in exterior **WSD** on interfaced side of Grommet Pocket in lining along top single notched edges. Baste these edges together, then cover these raw edges w/bias tape as described in step 4b.