



the Tandem DayPack

Steps 18-19

Applying Bias Tape to Interior Wall edges.

StudioKat Designs, Inc.


Phone: 866/409-8634

Email: info@studiokatdesigns.com

Are you intimidated by Bias-taping?

If so, here's some tips that should make it a whole lot easier for you!

Check it out here- <https://bit.ly/3Un4Wli>

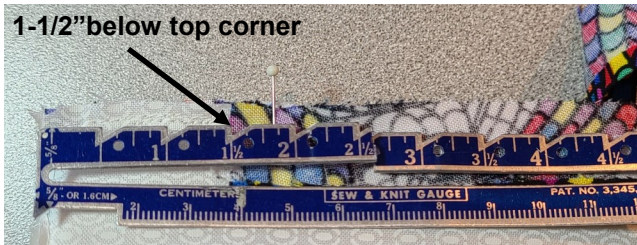


1-1/2" below top corner

18a) Retrieve the 22" piece of bias tape created in step A1. Pin bias tape edges RST to raw edges of Bag Back in lining beginning ~1-1/2" below top corner of Bag & continuing around Bag to a spot ~1-1/2" below opposite top Bag corner.


18b) Stitch in place a FULL 1/4" from edges with Wall in lining face down on machine bed.

Don't worry about leaving the top 1-1/2" of raw edges un-bias-taped. They'll be covered up later and it'll help with the seam bulkiness to do it this way! ;)

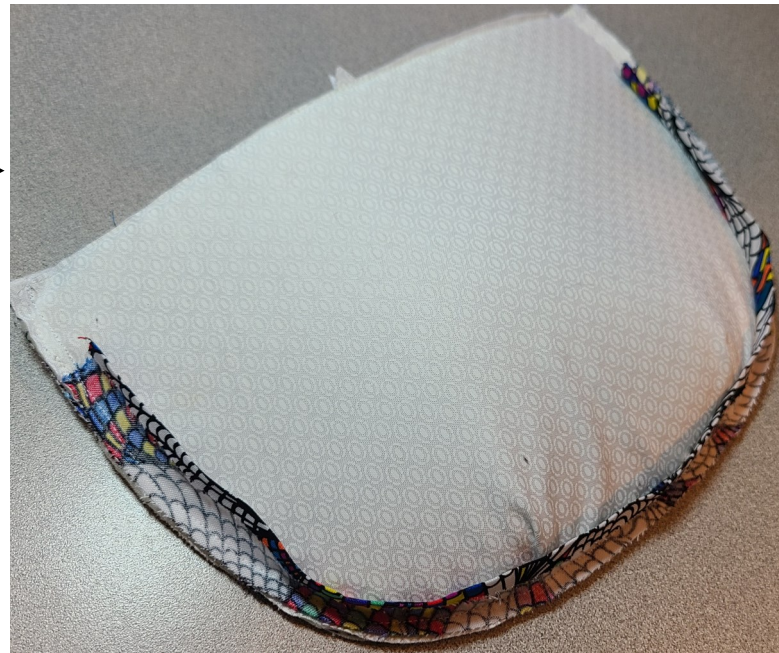

19) Flip bias tape over raw edges to Bag Back in lining. Pin in place then stitch a scant 1/4" from edges with Wall in lining face DOWN on machine bed once again.

(see the close ups below)

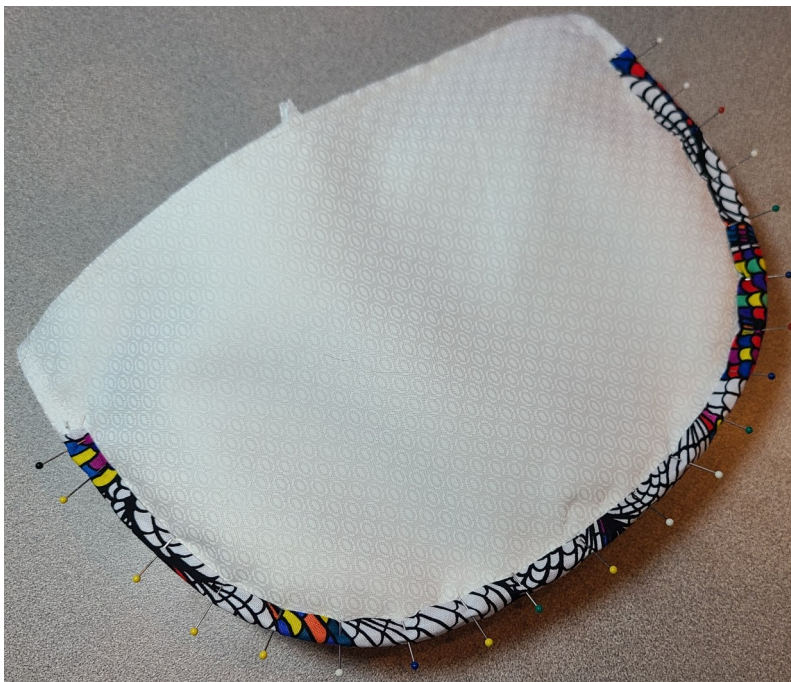

Yep, I still stitch this side of the bias tape in place with the Wall in lining face down on machine bed!

Do I stitch over the pins? Sometimes... if I'm feeling brave! :D

But more times than not I remove the pins as I come to them as I approach them. You might look closely & also notice that I'm stitching alongside the bias tape edge...NOT on top of the step 18 stitching. It's just easier.

