



the High Seas Convertible


Step 9

Bag Top in Foam to Bag Front in lining

StudioKat Designs, Inc.

Phone: 866/409-8634

Email: info@studiokatdesigns.com

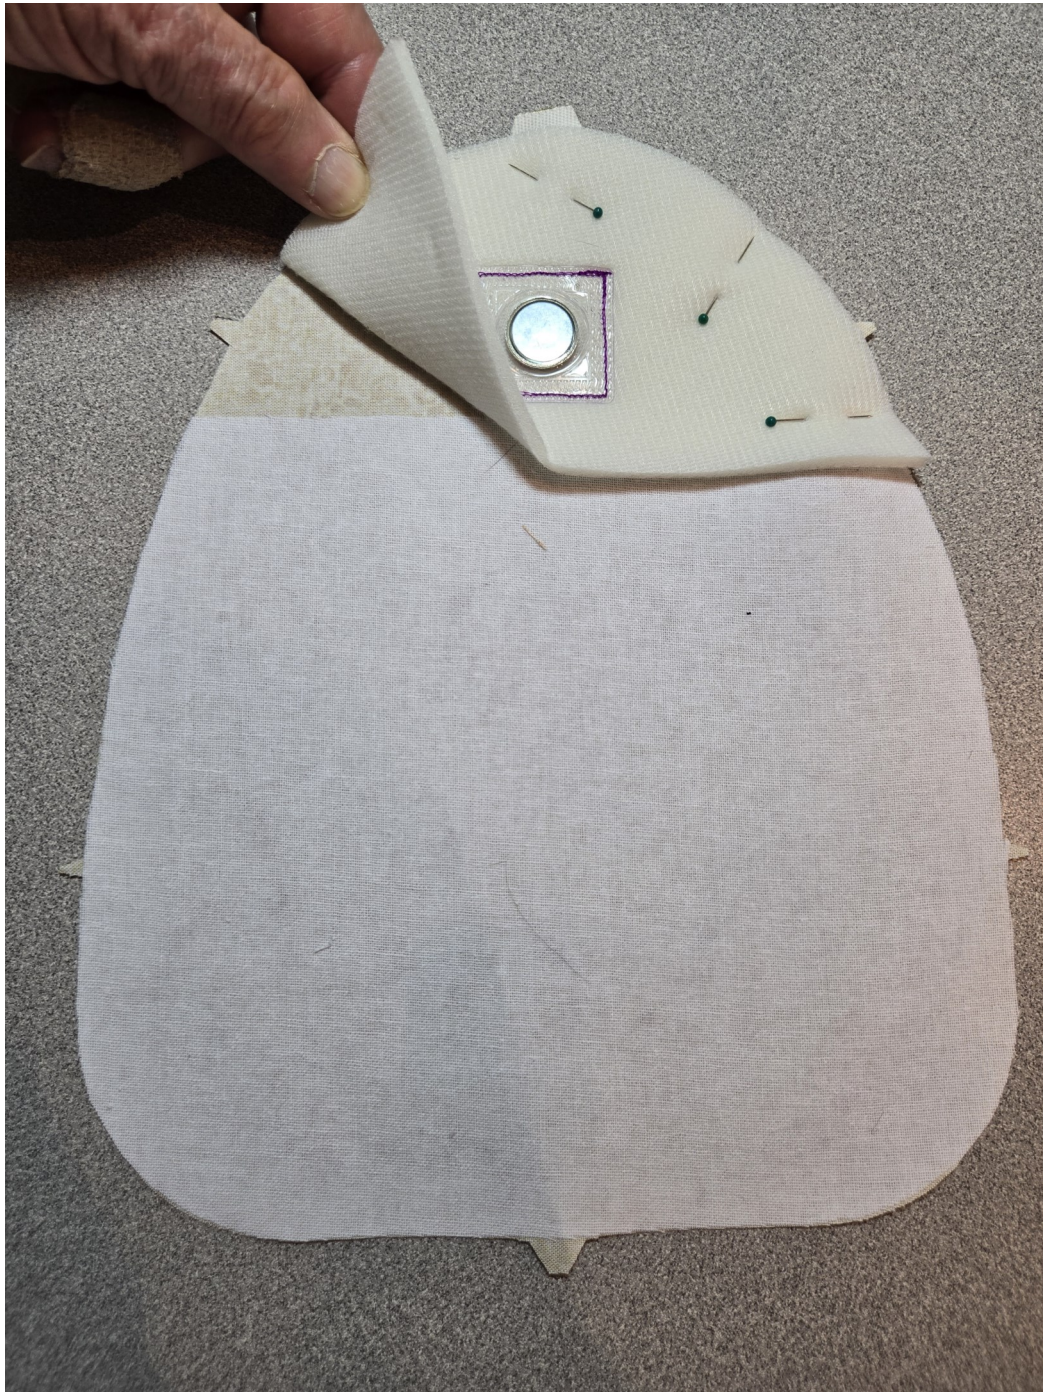

Step 9– Retrieve Bag Front in lining. Place Bag Top in foam magnetic side UP onto interfaced side of Bag Front in lining, matching top circular edges & notches.

DO notice that the bottom edge of the Bag Top in foam covers the top edge of Inner Wall in interfacing. Stitch in place close to outside circular edges only