



the High Seas Convertible

Steps 16-19 (page 1)

Back Band


StudioKat Designs, Inc.

Phone: 866/409-8634

Email: info@studiokatdesigns.com


16) Slip 2 D-rings onto Back Band. Center it WSD over side single notches on Pocket exterior so that side edges ANS so the top edge of Back Band is $\sim 7/8"$ below zipper seam. —————→

Keeping D-rings in center of Band, baste close to Band side edges thru all layers.

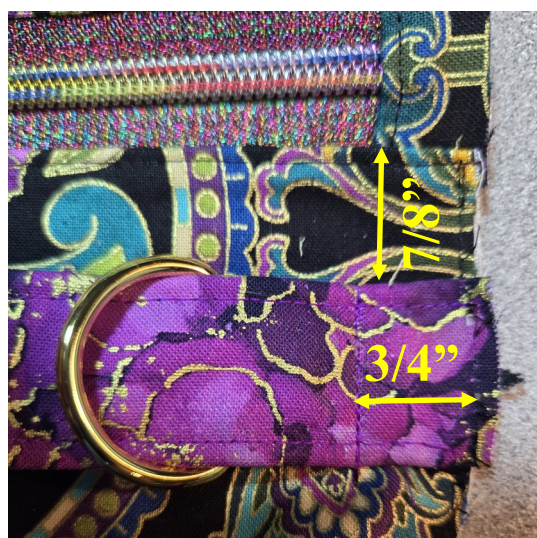

17a) Stitch across Band again, $3/4"$ from each side edge this time, (making sure that the Band is still $7/8"$ below zipper seam and that those D-rings are away from stitching area.

18a) Push each D-ring out toward side edges of Pocket.

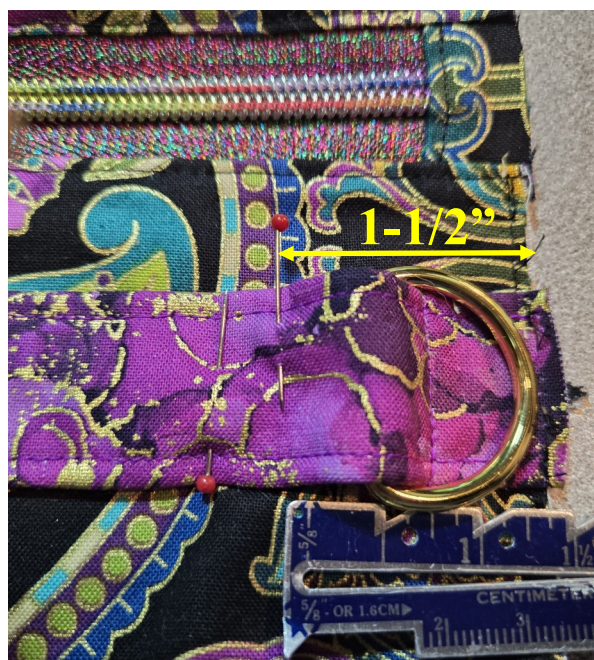

18b) now push the "Back Band slackness" out as evenly as possible to the side edges of the Pocket. Pin in place so the entire Band is lying FLAT against the Pocket.

Check again to verify that entire Band is $\sim 7/8"$ below zipper seam then stitch vertically across Band again, $\sim 1-1/2"$ from each side edge of Pocket. The D-rings should be enclosed LOOSELY within a $\sim 3/4"$ tunnel now.



the High Seas Convertible

Steps 16-19 (page 2)

Back Band

StudioKat Designs, Inc.

Phone: 866/409-8634

Email: info@studiokatdesigns.com



19) Now, with center of Band pinned flat against Pocket (and 7/8" below zipper seam), stitch across top & bottom edge of Band (over step 2 stitching), starting & stopping close to enclosed D-rings.

Get as close as you reasonably can, but there's no need stitching all the way up to the enclosed D-ring, Close is good enough.

:)

