



the High Seas Convertible

Steps 33-35 (page 1)

Side Bands

StudioKat Designs, Inc.

Phone: 866/409-8634

Email: info@studiokatdesigns.com



33a) Retrieve a Side Band & place it WSD on Expander exterior aligning one side edge w/an Expander side edge while centering it over side single notch near top Expander corner. Pin in place then baste close to raw edges thru ALL layers.

33b) Make a mark on top & bottom edge of Side Band, **1-1/8"** from raw edges. Draw a vertical line connecting these two marks (w/chalk or a fade away marker), then stitch along this line, reinforcing stitching at top & bottom end. (since this is an important weight bearing area).



34) Slip a 1" wide D-ring on Side Band then align remaining raw edges w/opposite Expander side edge while also centering it over side single notch. Baste close to these raw edges thru ALL layers. (This will cause the Band to bow OUT & away from Expander. This is not only OK... its NECESSARY!)


the High Seas Convertible
(page 2)
Side Bands

StudioKat Designs, Inc.

Phone: 866/409-8634
Email: info@studiokatdesigns.com



35) Push D-ring & Band slackness flat against Expander, completely away from area. Make a mark **1-1/8"** from raw edges on top & bottom edge of Side Band, Draw a vertical line connecting these two marks (*w/chalk or a fade away marker*), then stitch along this line, reinforcing stitching at both the starting & stopping point (*since this is a weight bearing area*). The D-ring should now be enclosed LOOSELY within a ~3/4" tunnel.

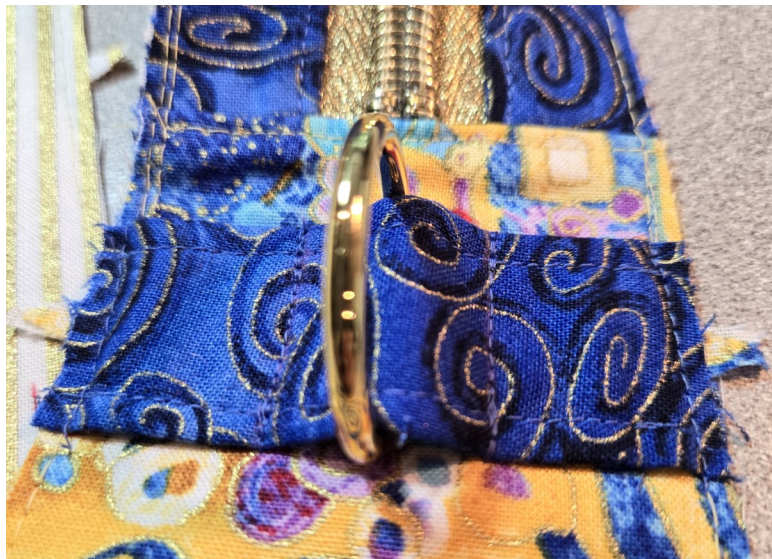

Repeat steps 33-35 with 2nd Side Band on opposite Expander end.

Here's how it should look when you're done.