




StudioKat Designs, Inc.

Phone: 336/416-1799


Email: info@studiokatdesigns.com

the AeroSling

Steps 20: Placing & Stitching the Base in place

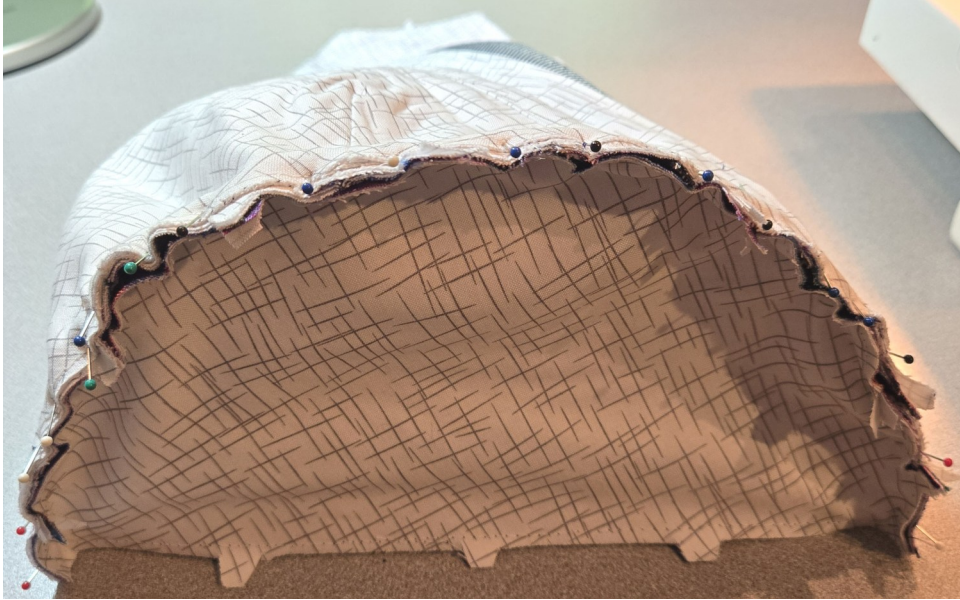

20a) Place Base RST along bottom edge of Bag Front aligning & securing both corners, & all notches together w/pins, easing remaining edges into place.

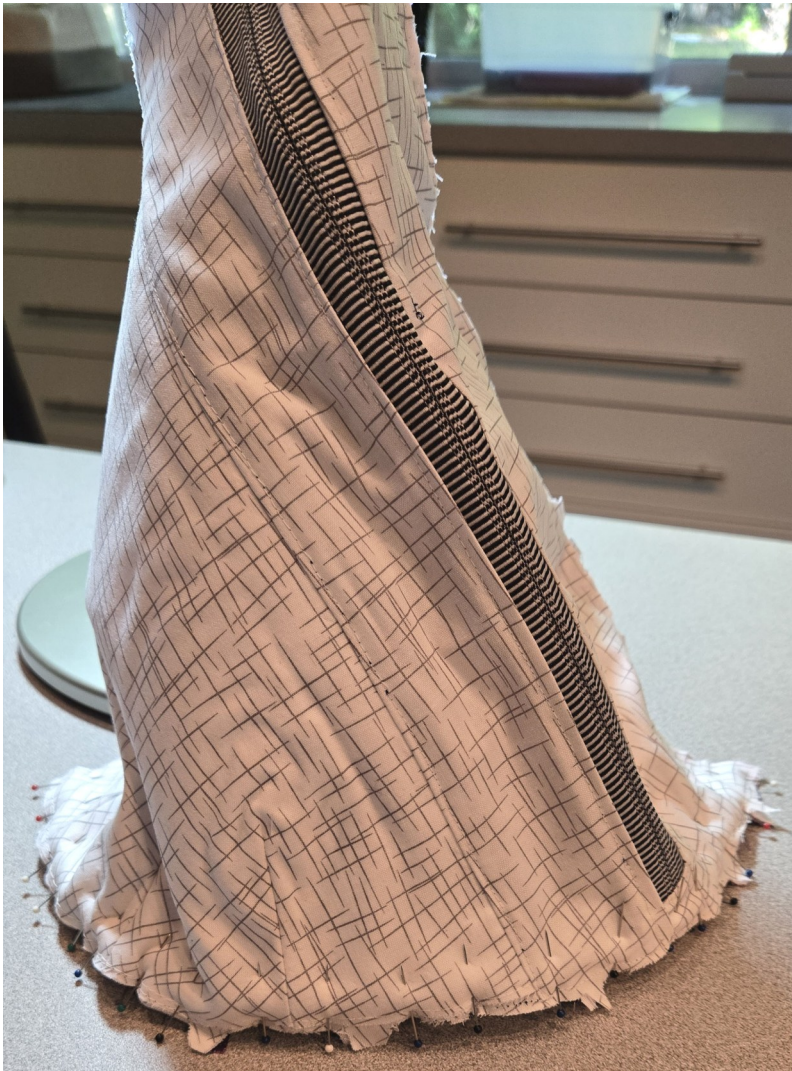

20b) Stitch a full 1/4" from edges, with Base LSD on machine bed (*as shown at left*). Re-stitch for security, & clip away notches & uneven fabric edges along bottom edge of Bag Front.