



StudioKat Designs, Inc.

Phone: 336/416-1799

Email: info@studiokatdesigns.com

the AeroSling


Steps 1-3 + Optional 5: Creating Back Pocket + placing your optional Card Caddy

Step 1-Retrieve Pocket(#3)in lining & in exterior (*from step A5*). Place them RST aligning top notched corner edges. Stitch 1/4" from edges thru the "cut-out window" ONLY. **DO NOT stitch thru the double-notched short edges adjacent to "cut-out window"**.

Re-stitch entire area, but w/special emphasis on those two bottom corners.




2) Trim seam, then clip as far as possible into each corner (**without** clipping into that stitching). Flip Pocket RSO & WST. Press flat especially thru the cut-out corners. Pin in place to secure this placement.

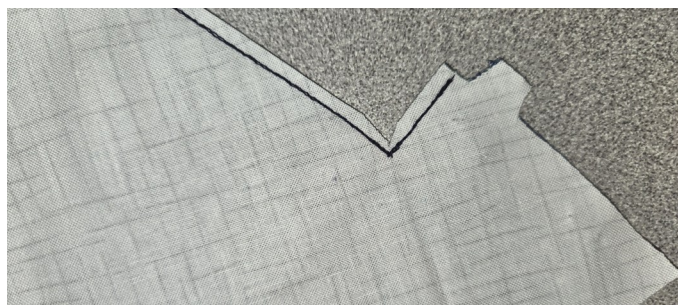

3a) Place Pocket LSD on an unaltered 10" zipper so the zipper pull is within the Pocket "window", BUT...so that BOTH zipperstops are MORE THAN 1/4" away from Pocket "window" edge.



3b) Topstitch close to all 3 edges of cut-out area.

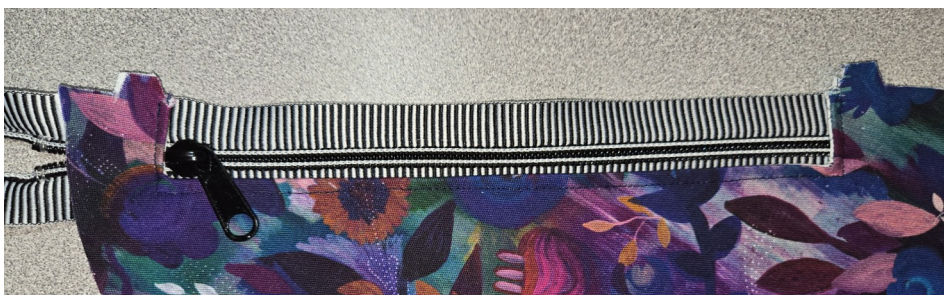

3c) Topstitch again, but this time, 1/4" from seam edge.





StudioKat Designs, Inc.

Phone: 336/416-1799

Email: info@studiokatdesigns.com

the AeroSling

Steps 1-3 + Optional 5:

Creating Back Pocket + placing your optional Card Caddy

5) **Optionally- add a Card Caddy to Back Pocket** -Retrieve Caddy (from step G9), & center it 1-1/2" below & parallel from triple notch on Bag Back in exterior. Stitch close to Caddy side & bottom edges to secure it in place.
(I like to leave Caddy top edge open & unstitched to provide more storage room, but it's YOUR choice!)

Please note: this stitching will be visible onLS of Bag interior

